

WP-7530 Series

Bezel Free All-in-One Modular Wall-Mount POS System



User Manual

Before installing and operating the unit, please read this user manual thoroughly and retain for reference.

How to Use This Manual

This manual contains information to set up and use the WP-7530. In addition, instructions are included for added hardware, software, upgrades, and optional items.

- Chapter 1** An introduction to what you find in the box and an overview of product specifications, appearance, and interface.
- Chapter 2** Detailed installation information for the base unit and upgrades, including the HDD, and main memory.
- Chapter 3** Mounting procedures for optional devices, such as MSR, Fingerprint, I-Button, IC Card, WiFi, Bluetooth, RFID, scanner, rear mount VFD, and swing arm kit.
- Chapter 4** PEB-973J main board diagrams, locations of jumpers, and connectors.
- Chapter 5** Installation instructions for the Intel chip set driver, video driver, touch screen tools, audio, LAN, RFID, Fingerprint, IC Card, AdvanPOS system and OPOS drivers.

**WARNING!**

Text set off in this manner indicates that failure to follow directions could result in bodily harm or loss of life.

**CAUTION:**

Text set off in this manner indicates that failure to follow directions could result in damage to equipment or loss of information.

**NOTE:**

Text set off in this manner provides important supplemental information.

Federal Communications Commission (FCC) Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



NOTE:

Shielded interconnect cables and shielded AC power cables must be employed with this equipment to insure compliance with pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Copyright

The information in this guide is subject to change without prior notice.

The manufacturer shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

This manual contains information protected by copyright. No part of this manual may be photocopied or reproduced in any form without prior written consent from the manufacturer.

The software described in this guide is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement.

Product names mentioned herein may be trademarks and/or registered trademarks of their respective companies.

© 2010 All rights reserved.
First Edition May 2010

Patents and Trademarks

AdvanPOS trademark:

Certificate No.: 01328466 (ROC patent)

Patents pending (European Union, Mainland China, and USA)

Precautions

1. Please read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from the AC outlet before cleaning. Do not use liquid or spray detergent for cleaning. Use only a moistened sheet or cloth.
4. For pluggable equipment, the socket outlet should be installed near the equipment and should be easily accessible.
5. Avoid humidity and moisture.
6. Install equipment on a stable surface.
7. Do not leave this equipment running in an enclosed or non-air-circulated environment, nor store in temperatures above 60°C. Such conditions may damage the equipment.
8. Ventilation openings on the unit are for air circulation and protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
9. Check the voltage of the power source before connecting the equipment to the power outlet.
10. Place the power cord so that it will not be stepped on. Do not place anything over the power cord. The power cord must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product.
11. All cautions and warnings on the equipment should be noted.
12. If the equipment is not used for a long time, disconnect the equipment from the power outlet to avoid damage.
13. Never allow any liquid into ventilation openings. This could cause fire or electrical shock.
14. Never open the equipment. For safety reasons, qualified service personnel should only open the equipment.
15. If one of the following situations may arise, get the equipment checked by qualified service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well or you cannot get it work according to the user manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of damage.



WARNING! Not intended for outdoor use.



CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with same type, and discard used batteries according to manufacturer's instructions.

Contents

How to Use This Manual	
Federal Communications Commission (FCC) Notice	
Copyright	
Patents and Trademarks	
Precautions	

Chapter 1 Introduction	1
Features	1
Specifications	1
Package Contents	3
Base System	4
Expandable Main Display	5
Convertible Pole-Type 2nd Display (optional)	6
Dimensions	7
Connector Panel	8
Chapter 2 Standard Hardware and Upgrades	9
Precautions	9
Opening System Box	10
Clearing CMOS	12
Memory Installation	13
Removing and Replacing the SATA Hard Disk	16
Chapter 3 Optional Components and Peripherals	18
MSR/Fingerprint/I-Button/IC Card Module Installation	18
Rear Mount VFD Installation	20
Swing Arm Kit Installation	22
Chapter 4 PEB-973J Main Board Configuration	24
Jumper and Connector Locations	24
Connectors Pin Assignments	26
Jumper Settings	33
Chapter 5 Software Setup	36
Pre-Installation Requirements	36
Intel Chipset Driver Installation	38
Intel Graphics Driver Installation	39
ELO Touch Screen Driver Installation	40
Abon Touch Screen Driver Installation	42
eGalax Touch Screen Driver Installation	44

Audio Driver Installation	46
Ethernet Driver Installation for Windows XP	47
Ethernet Driver Installation for Windows 7	47
Wireless LAN Driver Installation (optional).....	48
Rear Mount VFD USB-to-Serial Driver Installation (optional).....	50
RFID Driver Installation (optional)	51
MSR Driver Installation (optional)	52
Fingerprint Reader Driver Installation (optional).....	53
IC Card Reader Driver Installation (optional)	55
AdvanPOS System Driver Installation	56
OPOS CCO Driver Installation	57
AdvanPOS OPOS Driver Installation	59
Appendix A. Sample C++ Cash Drawer Code for Windows.....	60
Appendix B. Sample VB.NET Cash Drawer Code for Windows.....	62
Appendix C. Sample VB6.0 Cash Drawer Code for Windows	64

Chapter 1 Introduction

Features

- 15" TFT LCD with Bezel Free Resistive or P-CAP touch(optional)
- Fanless operation with Intel® Cedar Trail Processor D2550 1.86 GHz
- Support High Graphic Performance Direct 10.1, OpenGL 3.0 with Lower Power Consumption
- Aluminum and Plastic Housing
- System Memory up to 4GB DDRIII SDRAM
- Integrated stereo 2W+2W syste speaker
- 3 Mounting Options Available
- Support 12V and 24V powered USB Ports
- 4 x COM, 10 x USB, 1 x HDMI, 1 x Gigabit LAN and 1 Half Size SSD Module
- Flexible options: MSR, I-Button, Fingerprint, RFID and IC Card Reader
- RoHS compliant

Specifications

WP-7530 System Configuration

CPU	Intel® Cedar Trail Processor D2550 1.86GHz
System Chipset	Intel D2550 with NM10
System Memory	Supports maximum 1 x 4GB DDR3 SDRAM
Video Memory	Supports Intel DVMT technology
SSD	Supports 1 x Half size SSD module
HDD	1 x internal 2.5" SATA HDD bay
Power Supply	150W 12Vdc power adapter
OS Support	Windows® XP Pro Embedded / WEPOS® / Windows® POS Ready 2009 / Windows® 7 Pro Embedded / Linux®

LCD Touch Panel

Resolution Size	15" TFT LCD / 1280 x 1024
Brightness	250cd/m ²
Touch Screen Type	Bezel free ELO resistive touch(Default) Bezel free P-CAP touch(Option)

I/O Ports

USB Ports	Supports 7 USB 2.0 ports for future expansion (3 x internal, 4 x external)
Serial Ports	3 x external RS232: COM1, COM2 , COM4 with RJ-45 connector 1 x internal: COM3 for touch screen
HDMI Port	1 x HDMI Port

Ethernet Port	1 x RJ-45 Gigabit Ethernet(10/100/1000)
Audio	1 x Line out(Integrated stereo 2W+2W speaker)
Cash drawer	RJ-11(12V/24V selectable, 1 connector control 2 cash drawer)

Mechanics and Environment

Construction	Aluminum and plastic housing
Dimensions	214(D) x 318(W) x 318(H) mm
Housing Color	Black
Net Gross Weight	8.5 Kg
Operating Temperature	0 °C ~ 40 °C
EMI/Safety	CE, FCC, RoHS

Package Contents

POS System		AC Power Cord	
Utility and Main Board Chipset Driver CD		Wall Mount Swing Arm Kit (optional)	

Options

- Magnetic Stripe Reader (MSR) Module: triple track*
- 2-in-1 Module (Magnetic Stripe Reader + Fingerprint Reader) *
- 2-in-1 Module (Magnetic Stripe Reader + I-Button Reader) *
- 2-in-1 Module (Magnetic Stripe Reader + IC Card Reader) *
- 2-in-1 Module (Magnetic Stripe Reader + RFID) *
- 3-in-1 Module (Magnetic Stripe Reader + I-Button Reader + IC Card Reader) *
- VFD Customer Display: 9 mm height, 2 lines 20 characters each (rear mount type)
- Wall Mount Swing Arm Kit

* Available in front or side swipe formats.

Base System

Before you begin, take a few moments to become familiar with the WP-7530.



Expandable Main Display

The four sides of the main display are specially designed for expandable functions and connect with one of the available internal USB ports or PS/2 for operation. Optimized for simple installation, these interfaces do not require any voltage setting adjustments.

- Front side RFID module (USB interface)
- MSR (PS/2 interface)
- MSR+I-Button (PS/2 interface)
- MSR+Fingerprint (MSR for PS/2 interface, Fingerprint for USB interface)
- MSR+I-Button+IC Card Reader (MSR and I-Button for PS/2 interface, IC Card Reader for USB interface)



NOTE:

The Magnetic Stripe Reader module can only be installed to the right side of the front panel.



Convertible Pole-Type 2nd Display (optional)

The pole-type 2nd display is for use with the POS system to display purchase prices and change amounts to customers. It is also capable of displaying advertising messages and announcements.

Three types of pole mount display choices are available: a 8.9" LCD monitor, a 12" LCD monitor, a 15" LCD monitor, and a 9 mm high, 2 lines with 20 characters each VFD.

The pole mount is located at the rear of the base and connects with the 2nd display port for operation. Whether installing a VFD, 8.9" LCD, 12" LCD or 15" LCD, there is no need to change any settings on the main board or I/O board.






Single Pole 2nd display choices:

- 8.9" LCD
- 12" LCD
- 15" LCD(shown)
- 9 mm VFD


Dimensions

(Unit: mm)

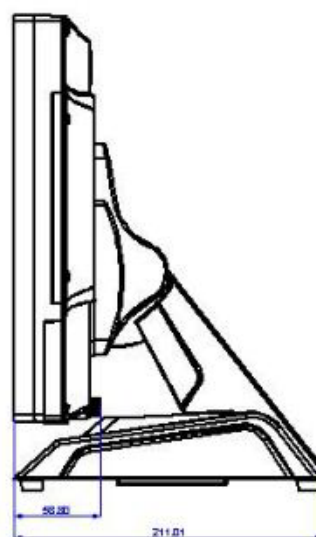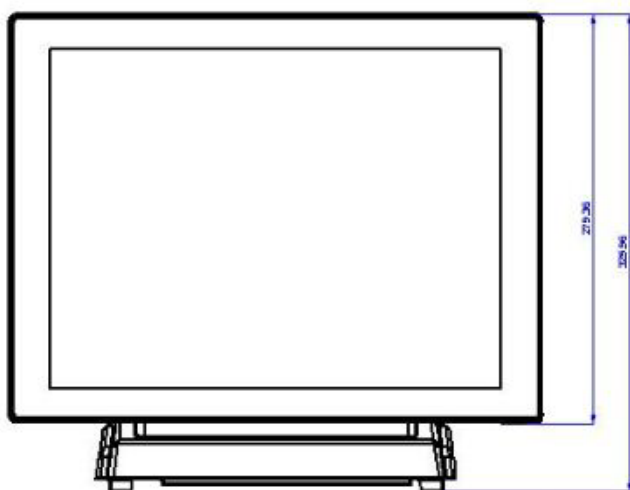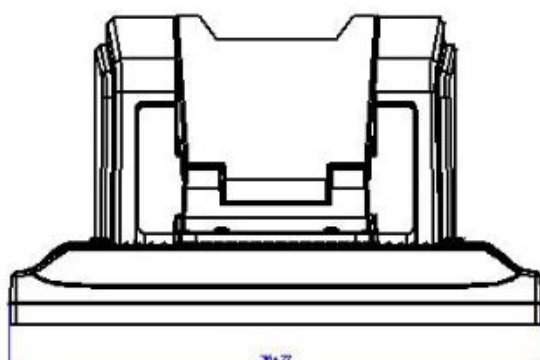

Connector Panel

The WP-7530's primary connector panel is located at the rear.

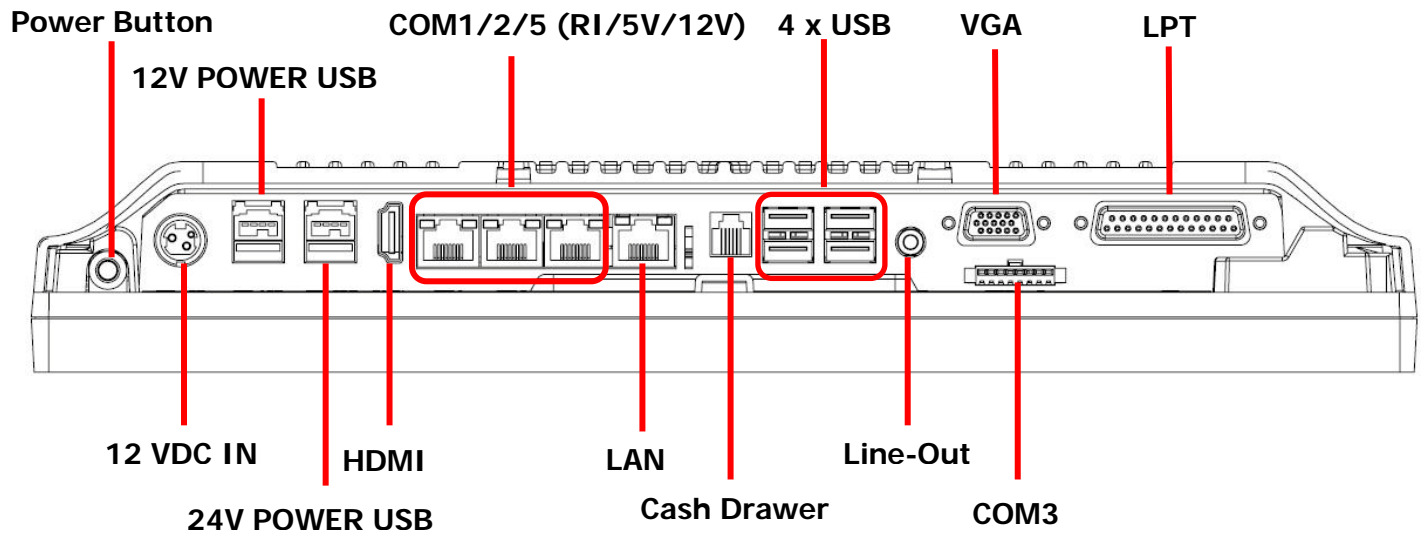

Chapter 2 Standard Hardware and Upgrades

Precautions

Before performing hardware changes, be sure to carefully read all of the applicable instructions, cautions, and warnings in this guide.

**WARNING!**

To reduce the risk of personal injury from electrical shock, hot surfaces, or fire:

Disconnect the power cord from the wall outlet and allow the internal system components to cool before touching.

Do not plug telecommunications or telephone connectors into the network interface controller receptacles.

Do not disable the power cord grounding plug. The grounding plug is an important safety feature.

Plug the power cord in a grounded (earthed) outlet that is easily accessible at all times.

**CAUTION:**

Static electricity can damage the electrical components of the computer and/or optional equipment. Before beginning these procedures, ensure that you are discharged of static electricity by briefly touching a grounded metal object.

When the computer is plugged into an AC power source, voltage is always applied to the main board. You must disconnect the power cord from the power source before opening the unit to prevent damage to internal components.

Opening System Box



CAUTION:

To prevent loss of work and damage to the system or drive:

If you are inserting or removing a drive, shut down the operating system properly, turn off the system, and unplug the power cord. Do not remove a drive while the system is on or in standby mode.

Before handling a drive, ensure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

1. Turn off the system power properly through the operating system, then turn off any external devices.
2. Disconnect the power cord from the power outlet and disconnect any external devices.
3. Unscrew two screws that attach the monitor to the hinge as shown below to remove it. Next, slide main LCD display upward slowly from hinge and remove it.




WARNING!

To avoid scratching the panel while dismantling the system, first place a piece of cloth or cushion on your work surface.

4. For easier access place the main LCD display upside down, then Remove four screws and detach the right side cover and left side cover.



5. Remove a screw and pull the mylar stuck on the HDD to remove HDD.

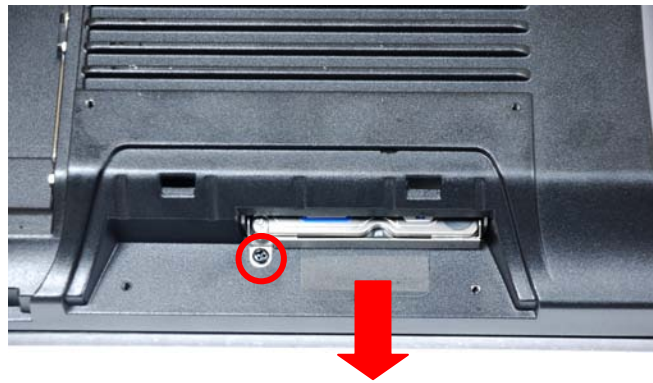

6. Remove two thumb screws indicated at the rear of the main LCD display, and then to remove IO cover.



7. Remove logo indicated on the back of main LCD display.



8. Unscrew seven screws on the back cover of main LCD display as shown below to remove it.



Clearing CMOS

The WP-7530's configuration (CMOS) may occasionally be corrupted. If it is, it will be necessary to clear the CMOS memory using jumper JP1. Please refer to Chapter 4 for the exact JP1 pin positions.

1. Turn off the system power properly through the operating system, then turn off any external devices.
2. Disconnect the power cord from the power outlet and disconnect any external devices.



CAUTION:

Regardless of the power-on state, voltage is always present on the main board as long as the system is plugged into an active AC outlet. The power cord must be disconnected from the power source before clearing the CMOS.



NOTE:

All LEDs on the board should be OFF. Failure to ensure there is no power in the system may damage the main board. You must disconnect the power cord to avoid damage to the internal components of the system.

3. Remove the system box and box cover.
4. Locate the JP1 jumper box on the main board PEB-973J.
5. Remove the jumper shunt from pins 1-2 and place over pins 2-3.
6. Wait 60 seconds to allow the CMOS to clear, then remove the jumper shunt and place it back in its original position over pins 1-2.
7. Replace the box cover and system box into the system.

Memory Installation

The memory sockets on the main board can be populated with up to an industry-standard DIMM. The WP-7530 comes standard with one preinstalled DIMM. To achieve maximum memory performance, up to 4GB of memory can be added.



CAUTION:

You must disconnect the power cord and wait approximately 30 seconds for the power to drain before adding or removing memory cards. Regardless of the power-on state, voltage is always supplied to the memory modules as long as the system is plugged into an active AC outlet. Adding or removing memory modules while voltage is present may cause irreparable damage to the memory modules or main board. If you see an LED light on the main board, voltage is still present.

The memory module sockets have gold-plated metal contacts. When upgrading the memory, it is important to use memory modules with gold-plated metal contacts to prevent corrosion and/or oxidation resulting from having incompatible metals in contact with each other.

Static electricity can damage the electronic components of the system or optional cards. Before beginning these procedures, ensure that you are discharged of static electricity by briefly touching a grounded metal object.

When handling a memory module, be careful not to touch any of the contacts. Doing so may damage the module.

-
1. Turn off the system power properly through the operating system, then turn off any external devices.
 2. Disconnect the power cord from the power outlet and disconnect any external devices.



CAUTION:

Regardless of the power-on state, voltage is always present on the main board as long as the system is plugged into an active AC outlet. You must disconnect the power cord to avoid damage to the internal components of the system.



WARNING!

To reduce risk of personal injury from hot surfaces, allow the internal system components to cool before touching.


-
3. Unscrew two screws that attach the monitor to the hinge as shown below to remove it. Next, slide main LCD display upward slowly from hinge and remove it.



4. For easier access place the main LCD display upside down, then Remove four screws and detach the right side cover and left side cover.



5. Remove a screw and pull the mylar stuck on the HDD to remove HDD.

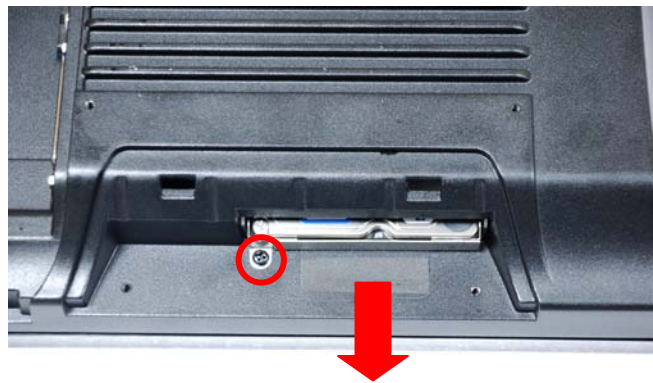

6. Remove two thumb screws indicated at the rear of the main LCD display, and then to remove IO cover.



7. Remove logo indicated on the back of main LCD display.



8. Unscrew seven screws on the back cover of main LCD display as shown below to remove it.





8. If an existing memory card or cards need to be replaced, pull the ends of both metal latches away from the card to release it.



NOTE:

A memory card can be installed in only one way. Match the notch on the card with the tab in the memory socket.

9. Insert the new or replacement memory card into the socket, almost covering the gold contacts completely, then push the card down. If the card is fully inserted and properly seated, the metal latches will be in the closed position indicated.

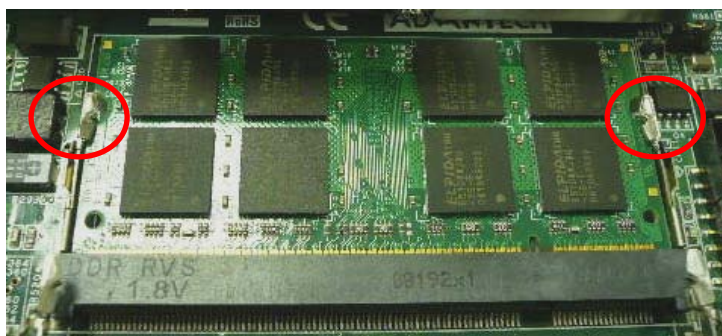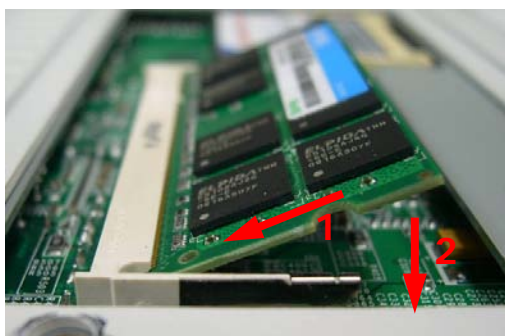

10. Replace the RAM cover, then replace the system box.
11. Reconnect the power cord and any external devices, then turn on the system. The system should automatically recognize the additional memory when powered up.

Removing and Replacing the SATA Hard Disk

**NOTE:**

This system does not support Parallel ATA (PATA) hard drives.

Before removing the original hard drive, be sure to back up its data so that you can transfer the data to the replacement hard drive. Also, if you are replacing the primary hard drive, make sure you have a recovery disc set to restore the operating system, software drivers, and any software applications that were preinstalled on the system.

1. Turn off the system power properly through the operating system, then turn off any external devices.
2. Disconnect the power cord from the power outlet and disconnect any external devices.

**CAUTION:**

Regardless of the power-on state, voltage is always present on the main board as long as the system is plugged into an active AC outlet. You must disconnect the power cord to avoid damage to the internal components of the system.

3. Unscrew two screws that attach the monitor to the hinge as shown below to remove it. Next, slide main LCD display upward slowly from hing and remove it.




4. For easier access place the main LCD display upside down, then Remove two screws and detach the left side cover.



**WARNING!**

To avoid scratching the panel during the dismantling process, first place a piece of cloth or cushion underneath.

5. Remove a screw and pull the mylar stuck on the HDD to remove HDD.

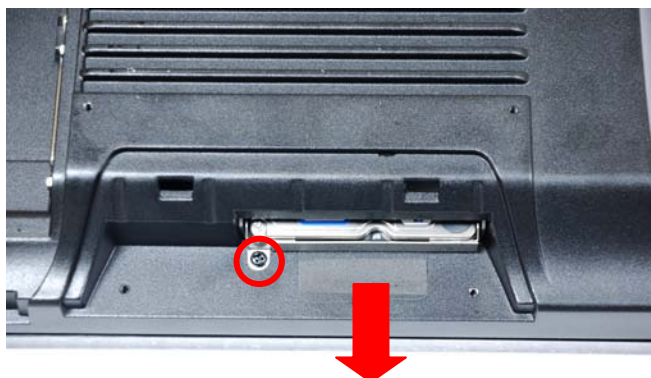

5. Press the HDD to release the HDD from the HDD tray as shown below. Next, insert the replacement hard disk into the HDD tray.



6. Slide the HDD box back into the panel, ensuring that it is pressed all the way in and properly seated.
7. Reattach a screw that secure the HDD box.
8. Reattach the cover and two screws.
9. Reconnect the power cord and any external devices, then turn on the system.

**NOTE:**

The capacity of a sector is 4096 bytes for 320GB HDD of WD. They are only suitable for Win7 or OS developed later than Win7. To use Microsoft earlier OS such as XP, POS Ready2009, You should install support tools offered by original supplier to align the performance of HDD. Otherwise HDD life will be reduced about 48%. You can get the alignment tool from following website or driver CD included in the package.

WD Alignment tool: <http://support.wdc.com/product/downloadsw.asp?sid=128>

Chapter 3 Optional Components and Peripherals

MSR/Fingerprint/I-Button/IC Card Module Installation



NOTE:

The MSR module can only be installed to its designated position and socket; the same with the wireless module. Their locations are not interchangeable.

1. Turn off the system power properly through the operating system, then turn off any external devices.
2. Disconnect the power cord from the power outlet and disconnect any external devices.



CAUTION:

Regardless of the power-on state, voltage is always present on the main board as long as the system is plugged into an active AC outlet. You must disconnect the power cord to avoid damage to the internal components of the system.

3. Unscrew two screws that attach the monitor to the hinge as shown below to remove it. Next, slide main LCD display upward slowly from hing and remove it.



4. For easier access place the main LCD display upside down, then Remove two screws and detach the right side cover.



3. Slide the MSR into the main LCD display, ensuring it is plugged securely into the socket.
4. Reattach the two screws that secure the MSR to the main LCD display.



5. Reconnect the power cord and any external devices, then turn on the system.



NOTE:

The MSR module configuration tool is in the included CD. If you need configure MSR module, please execute the utility according to the procedure specified in Chapter 5.

Rear Mount VFD Installation


1. Turn off the system power properly through the operating system, then turn off any external devices.
2. Disconnect the power cord from the power outlet and disconnect any external devices.



CAUTION:

Regardless of the power-on state, voltage is always present on the main board as long as the system is plugged into an active AC outlet. You must disconnect the power cord to avoid damage to the internal components of the system.

3. Open the back cover of the main LCD display.
4. Screw VFD KBTR BOARD on the LCD base sheet metal of WP-7530 as shown below.

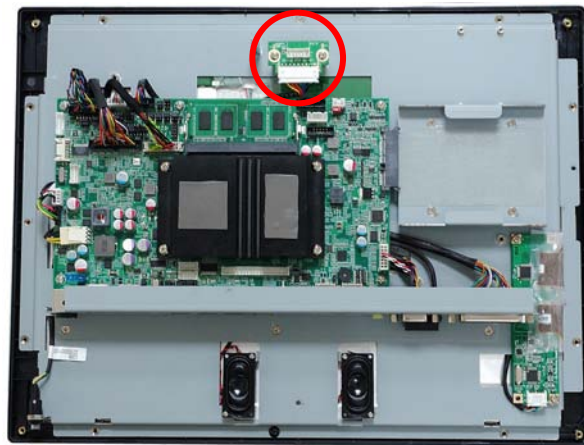

5. Connect J14 of main and J1 of VFD KBTR BOARD with VFD cable.
6. Reattach the back cover and then secure the VFD module.



7. Reconnect the power cord and any external devices, then turn on the system.




NOTE:

The rear mount VFD module configuration utility is in the included CD. If you need configure VFD module, please execute the utility according to the procedure specified in Chapter 5.

Swing Arm Kit Installation

Select a flat surface of adequate strength, ensuring there will be proper ventilation and maneuvering space. Please use the right tools and accessories according to the surface material (drywall, concrete, solid wood, etc.) to securely support the system box. A fully equipped system may weigh up to 5.5 kg.

1. Drill four holes in the surface following the rectangular mounting plate layout as shown below. The rectangular drill pattern should be 130mm wide (horizontal) and 130mm high (vertical). Secure the swing arm to the surface with four screws.

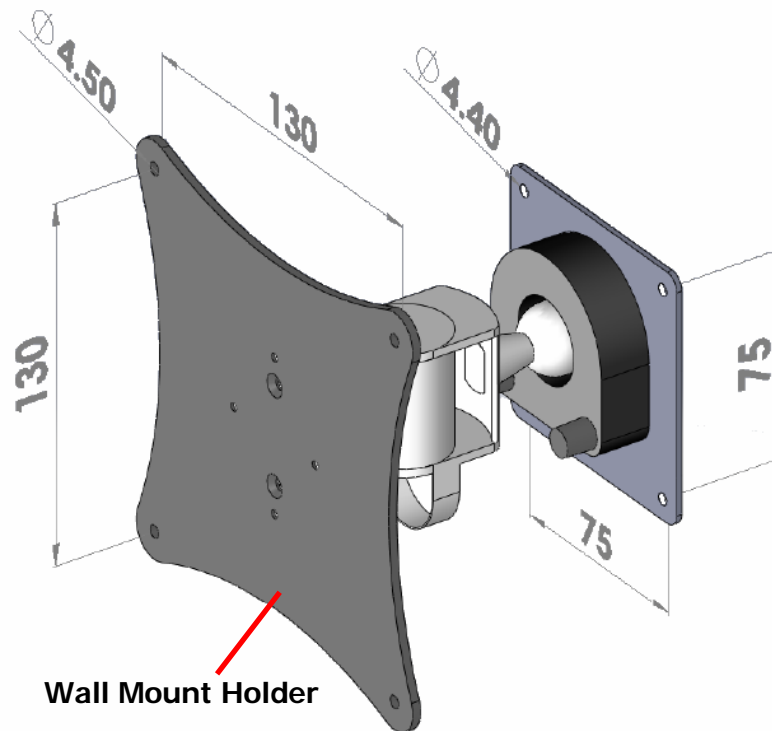

NOTE:

Wall mounting screws are not supplied, as different types of walls require different types of screws. Please be sure the mounting screws used can support the weight of the unit.

2. Next, prepare the arm to be attached to the WP-65X1. Release the two thumb screws and remove the VESA holder plate by sliding it in the direction of the arrow.



3. Secure the VESA holder to the main LCD display with four screws.




4. Affix the main LCD display to the swing arm by sliding the holder plate back into its swing arm holder.



5. After the main unit is attached, replace the two thumb screws to secure the panel.

Chapter 4 PEB-973J Main Board Configuration

Jumper and Connector Locations

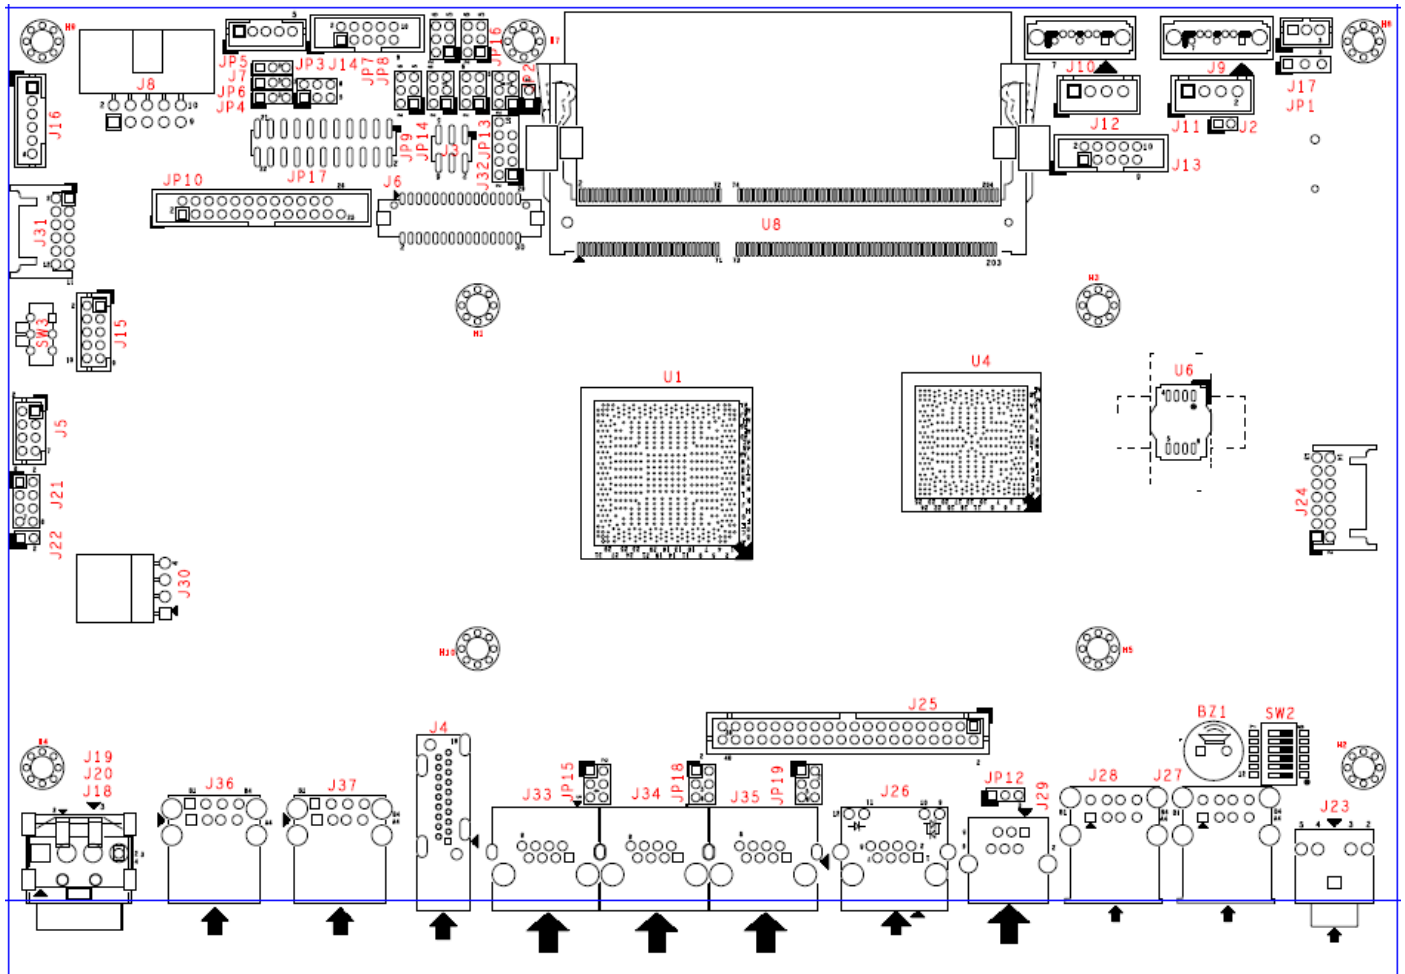

Connector Allocations

Jump	Function
JP1	CMOS RAM charge/discharge setup
JP3	LVDS Panel VDD input voltage selection
JP4	LVDS Panel Backlight enable voltage selection
JP7;JP8;JP9; JP13;JP14;JP16	COM Port RI Voltage selection
JP11	Backlight control voltage level Mode
JP12	Cash Drawer Voltage selection
JP15; JP18; JP19	COM1 & COM2 & COM5 Console Selection Header
JP17	COM5 PORT RS232/422/485 Selection Header
JP20	LVDS Backlight control PWM or DC Mode
SW2	Audio Jack for AMP Function
SW3	KBTR COM Port & keyboard Function Selection
SW4	Cash Drawer Voltage selection
J4	HDMI Connector
J5	USB pin Header
J6	LVDS Connector
J8	VGA Pin Header.
J10	SATA Connector
J12	SATA Power pin header
J13;J14 ;J15	COM 3/4/6 Port pin header
J16	KB pin header
J17	System FAN Control pin header
J18.	INPUT Power Jack
J20	Power Pin Header (12V INPUT)
J21	Front panel pin header
J22	HDD_LED pin header
J23	Audio LINE_OUT phone Jack
J24	Audi Line _OUT & MIC & LINE_IN Function Pin Header
J25	LAN & USB & COM Port Co-layout pin header
J26	LAN Connector
J27;J28	USB Connector.
J29	Cash Drawer Connector.
J30	+12V OUT pin header
J31	KBTR pin header
J32	LPC Debug Port pin header
J33;J34;J35	COM PORT 1/2/5 Connector
J36	Power USB 12V Connector
J37	Power USB 24V Connector
J38;J39	COM PORT 2/5 Connector
J40	SMD Connector.SATA 7+15P Connector
JP2	Case Open Pin Header
JP5	BACK LIGHT PWR Pin Header
JP10	LPT Pin Header

Connectors Pin Assignments

J4

HDMI Connector

PIN No.	Signal Description	PIN No.	Signal Description
1	TMDA DATA2+	2	DATA2 SHGND
3	TMDA DATA2-	4	TMDA DATA1+
5	DATA1 SHGND	6	TMDA DATA1-
7	TMDA DATA0+	8	DATA0 SHGND
9	TMDA DATA0-	10	TMDA CLK+
11	CLK SHGND	12	TMDA CLK-
13	CEC	14	RESERVED
15	SCL	16	SDA
17	DDC/CEC/GND	18	+5V Power
19	HPDET		

J5

USB pin Header

PIN No.	Signal Description	PIN No.	Signal Description
1	USBA_VCC	2	USBB_VCC
3	USBDAM	4	USBDBN
5	USBDAP	6	USBDBP
7	GND	8	GND

J6

LVDS Connector

PIN No.	Signal Description	PIN No.	Signal Description
1	LVDS_P_CH0_TX0	2	LVDS_N_CH0_TX0
3	LVDS_P_CH0_TX1	4	LVDS_N_CH0_TX1
5	LVDS_P_CH0_TX2	6	LVDS_N_CH0_TX2
7	LVDS_P_CH0_TX3	8	LVDS_N_CH0_TX3
9	LVDS_P_CH0_TX_CLK	10	LVDS_N_CH0_TX_CLK
11	LVDS0_CHB_TX0P	12	LVDS0_CHB_TX0N
13	LVDS0_CHB_TX1P	14	LVDS0_CHB_TX1N
15	LVDS0_CHB_TX2P	16	LVDS0_CHB_TX2N
17	LVDS0_CHB_TX3P	18	LVDS0_CHB_TX3N
19	LVDS0_CHB_CLKP	20	LVDS0_CHB_CLKN
21	LVDS0_DDC_CLK	22	LVDS0_DDC_DATA
23	GND	24	NC
25	GND	26	GND
27	VDD_LVDS	28	VDD_LVDS
29	NC	30	VDD_LVDS

J8**VGA pin header**

PIN No.	Signal Description	PIN No.	Signal Description
1	R	2	GND
3	GND	4	SCL
5	G	6	GND
7	VGA_AL_EN	8	SDA
9	VSYNC	10	GND
11	GND	12	HSYNC
13	5V	14	GND
15	NC	16	VSYNC

J10**SATA Connector**

PIN No.	Signal Description
1	GND1
2	TX+
3	TX-
4	GND2
5	RX-
6	RX+
7	GND3

J12**SATA Power pin header**

PIN No.	Signal Description
1	+12V
2	GND
3	GND
4	+5V

J13 ; J14 ; J15**COM 3/4/6 PORT pin header**

PIN No.	Signal Description	PIN No.	Signal Description
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	V_RI
9	GND	10	NC

J16**KB pin header**

PIN No.	Signal Description
1	L_KCLK
2	L_MDAT
3	L_KDAT
4	KB_5VCC
5	L_MCLK
6	GND

J17**System FAN Control pin header**

PIN No.	Signal Description
1	Fan Control
2	+12V
3	GND

J20**Power PIN Header (12V INPUT)**

PIN No.	Signal Description
1	GND
2	GND
3	+12V_VIN
4	+12V_VIN

J21**Front panel pin header**

PIN No.	Signal Description	PIN No.	Signal Description
1	SUSLED+	2	SUSLED-
3	PWRLED+	4	PWRLED-
5	GND	6	SYS_RESET
7	PWR_ON_SW#	8	GND

J24**Audi Line _OUT & MIC & LINE_IN Function Pin Header**

PIN No.	Signal Description	PIN No.	Signal Description
1	MIC-L	2	MIC-R
3	LINE_IN_L	4	ACGND
5	LINE_IN_R	6	ACGND
7	AMP_LINE_OUT_L+	8	AMP_LINE_OUT_L-
9	AMP_LINE_OUT_R+	10	AMP_LINE_OUT_R-
11	Jack_HP-IN	12	ACGND
13	LINE_OUT_L	14	LINE_OUT_R

J25**LAN & USB & COM Port Co-layout pin header**

PIN No.	Signal Description	PIN No.	Signal Description
1	LAN1_MDIO+	2	+5VCC
3	LAN1_MDIO-	4	+5VCC
5	LAN1_MDII+	6	+5VCC
7	LAN1_MDII-	8	+5VCC
9	LAN1_MDI2+	10	GND
11	LAN1_MDI2-	12	GND
13	LAN1_MDI3+	14	+12V
15	LAN1_MDI3-	16	+12V
17	GND	18	GND
19	DR_OUTA	20	+12V/24V
21	DR_OUTB	22	GND
23	DINT_R_0	24	DCD#1
25	GND	26	DSR#1
27	USBD0N	28	RXD#1
29	USBD0P	30	RTS#1
31	GND	32	TXD#1
33	GND	34	CTS#1
35	USBD1N	36	DTR#1
37	USBD1P	38	V_RI1
39	GND	40	GND

J27 ; J28**USBx2 Stack A Type Connector**

PIN No.	Signal Description	PIN No.	Signal Description
A1	5VCC	B1	5VCC
A2	D0-	B2	D1-
A3	D0+	B3	D1+
A4	GND	B4	GND

J29**Cash Drawer Connector**

PIN No.	Signal Description
1	GND
2	DR_OUTA
3	DINT_R_0
4	VDD
5	DR_OUTB
6	GND

J30**+12V Output Pin Header**

PIN No.	Signal Description
1	+12V
2	+12V
3	GND
4	GND

J31**KBTR pin header**

PIN No.	Signal Description	PIN No.	Signal Description
1	USBD10P	2	GND
3	USBD10N	4	GND
5	USBD6P	6	GND
7	USBD6N	8	+5V
9	L_KDAT(TX COM6)	10	+5V
11	L_KCLK(RX COM6)	12	+5V

J32**LPC DEBUG PORT Pin Header**

PIN No.	Signal Description	PIN No.	Signal Description
1	LAD0	2	+3.3V
3	LAD1	4	SIO_PLTRST_N
5	LAD2	6	LFRAME_N
7	LAD3	8	CLK_PORT_80H
9	NC	10	GND

J33 ; J34 ; J35**COM PORT 1/2/5 Connector**

PIN No.	Signal Description
1	RI
2	CTS#
3	GND
4	RTS#
5	DTR#
6	DSR#
7	TXD#
8	RXD#

J38 ; J39**COM 2/5 PORT pin header**

PIN No.	Signal Description	PIN No.	Signal Description
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	V_RI
9	GND	10	NC

Note : J38 J34/J39 J35 belong com 2/5 port connector, this part can only a second election to use for com port connector.

J40**SATA Connector& SATA Power pin header**

PIN No.	Signal Description	PIN No.	Signal Description
1	GND	12	GND
2	TX+	13	GND
3	TX-	14	5V
4	GND	15	5V
5	RX-	16	5V
6	RX+	17	GND
7	GND	18	NC
8	3.3V	19	GND
9	3.3V	20	12V
10	3.3V	21	12V
11	GND	22	12V

JP2**Case Open Pin Header**

PIN No.	Signal Description
1	CASE OPEN#
2	GND

JP5**BACK LIGHT PWR Pin Header**

PIN No.	Signal Description
1	VCC5_PS / +5V
2	BACK LIGHT Control
3	+12V
4	GND
5	BKLT LIGHT Enable

PIN No.	Function	PIN No.	Function
1	P_STB -	2	P_AF D-
3	P_PD0	4	ERR -
5	P_PD1	6	P_INIT -
7	P_PD2	8	P_SLIN -
9	P_PD3	10	GND
11	P_PD4	12	GND
13	P_PD5	14	GND
15	P_PD6	16	GND
17	P_PD7	18	GND
19	ACK -	20	GND
21	BUSY	22	GND
23	PE	24	GND
25	SLCT	26	Key

Jumper Settings

To set jumper positions, place the jumper shunt over the pins designated in the table (SHORT) or remove (NC) it from the jumper pins and store for future use. Default settings are indicated with a star sign (★).

JP1

CMOS RAM charge/discharge setup

JP1	Function
1-2 short	NORMAL ★
2-3 short	Clear CMOS

JP3

LVDS Panel VDD input voltage selection

JP3	Function
2-4	VCC=3.3V ★
4-6	VCC=5V
3-4	VCC=12V

JP4

LVDS Panel Backlight enable voltage selection

JP4	Function
1-2	VCC=3.3V ★
2-3	VCC=5V

JP7 ; JP8 ; JP9 ; JP13 ; JP14 ; JP16

COM Port RI Voltage selection

JP7;JP8; JP9;JP13; JP14;JP16	Function
1-2 short	VDD=5V
3-4 short	RI# ★
5-6 short	VDD=12V



NOTE:

Wrong voltage selection may damage the COM Port device. Please survey COM port device's RI before setting this jumper setting.

JP11**Backlight control voltage level Mode**

JP11	Function
1-2	3.3V
2-3	5V

JP12**Cash Drawer Voltage selection**

JP12	Function
1;2	12V ★
2;3	24V

JP15 ; JP18 ; JP19**COM1 & COM 2 & COM5 Console Selection Header**

PIN No.	Function
RS232	1-3 ; 2-4

JP17**COM5 PORT RS232/422/485 Selection Header**

COM5 Function	Jumper Setting (Pin closed)
RS-232	5-6;9-11;10-12;15-17;16-18
RS-422	3-4;7-9;8-10;13-15;14-16;21-22
RS-485	1-2;7-9;8-10;19-20

JP20**LVDS Backlight control PWM or DC Mode**

JP20	Function
1-3;2-4	PWM Mode ★
3-5;4-6	DC Mode

SW2**Audio Jack for AMP Function**

SW2	Function
1 ; 3 ; 5 ON 2 ; 4 ; 6 OFF	For AMP Function ★
2 ; 4 ; 5 ; 6 ON 1 ; 3 OFF	No AMP Function

SW3**KBTR COM Port & keyboard Function Selection**

SW3	Function
A-B	Keyboard Function ★
B-C	COM6 Port TX & RX Function

SW4**Cash Drawer Voltage selection**

SW4	Function
Upward	24V
Downward	12V ★


Note : Wrong voltage selection may damage the Cash Drawer device .

Chapter 5 Software Setup

Pre-Installation Requirements

This system comes with a variety of drivers for different operating systems. A software CD is included in the package contents. The following section documents the procedures used to install the peripheral.

1. Insert software CD into a system.
2. Run the setup.exe file on the CD.
3. Click **【Select Product】** to select your POS model.

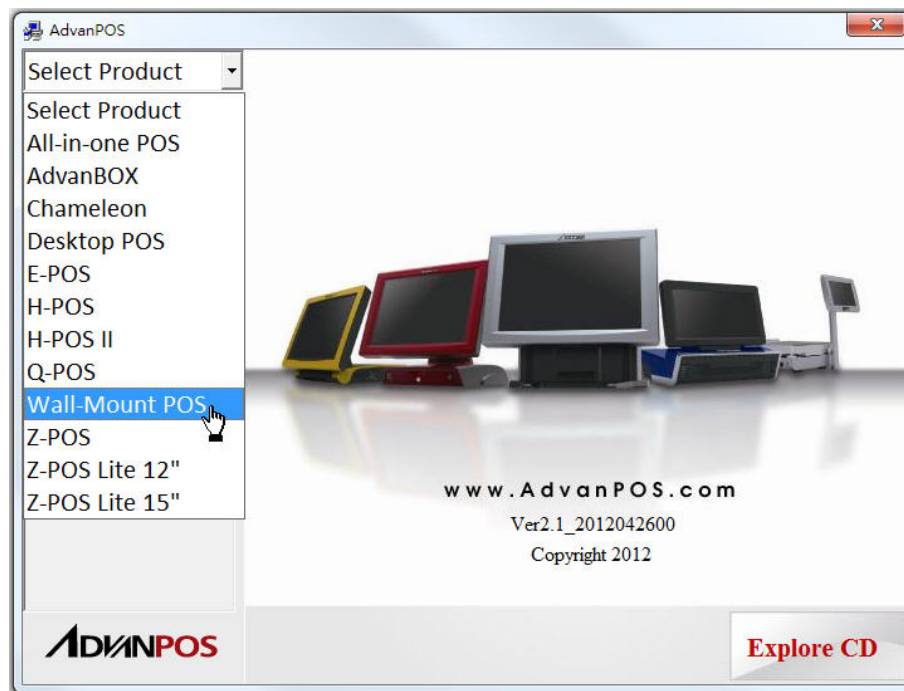

4. Click **【Select System】** to select your operating system.







5. Select your POS model Number.



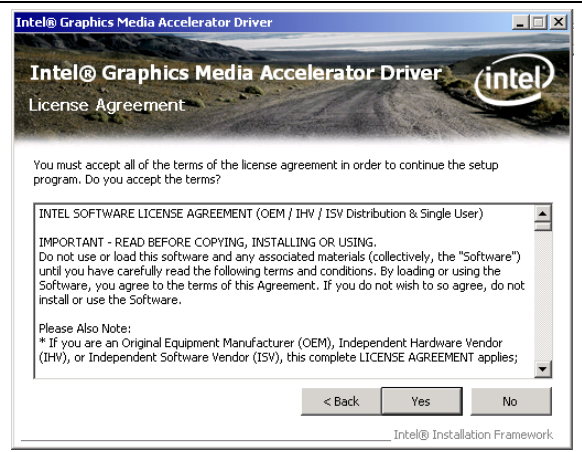
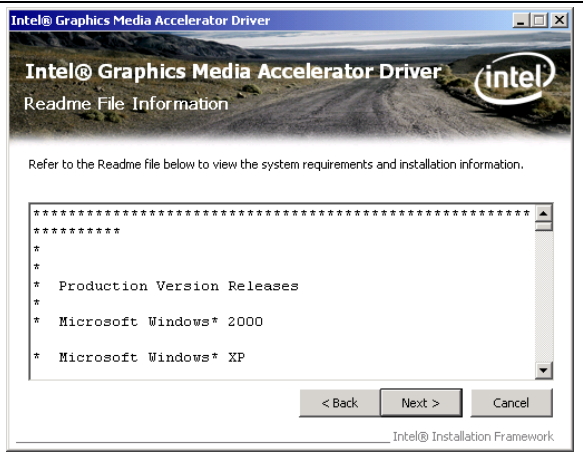
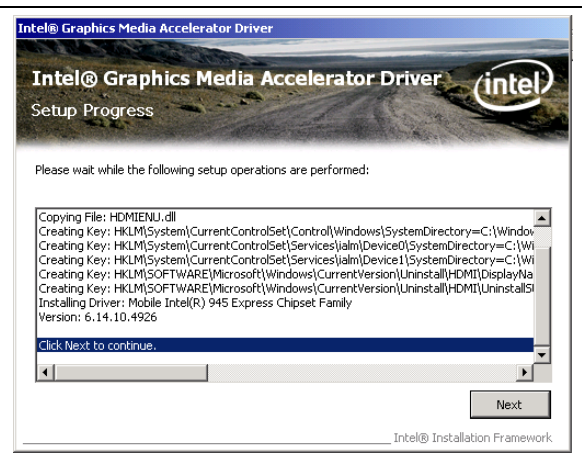



6. Select the peripheral driver that you want to install and then follow on-screen instructions to install your driver or refer to following procedures specifying how every driver is to be installed.


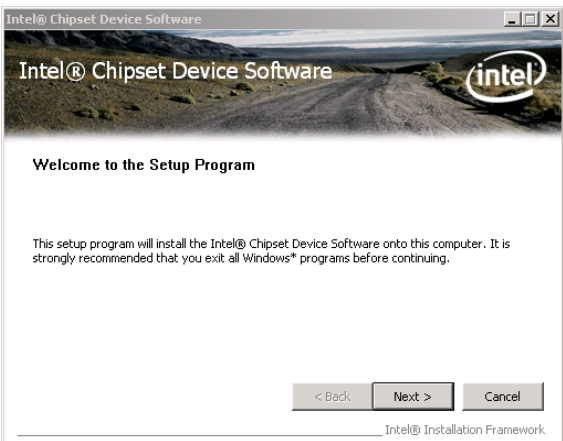
Intel Chipset Driver Installation

 <p>The screenshot shows the 'Welcome to the Setup Program' window. It features the Intel logo and a background image of a dirt road. The text reads: 'Welcome to the Setup Program' and 'This setup program will install the Intel® Chipset Device Software onto this computer. It is strongly recommended that you exit all Windows* programs before continuing.' At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>	 <p>The screenshot shows the 'License Agreement' window. It features the Intel logo and a background image of a dirt road. The text reads: 'You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?' Below this is a scrollable area containing the 'INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)' and 'IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.' At the bottom, there are three buttons: '< Back', 'Yes', and 'No'.</p>
<p>1. Click the Next button on the Welcome screen.</p>	<p>2. Click Yes on the License Agreement screen.</p>
 <p>The screenshot shows the 'Readme File Information' window. It features the Intel logo and a background image of a dirt road. The text reads: 'Refer to the Readme file below to view the system requirements and installation information. Press the Page Down key to view the rest of the file.' Below this is a scrollable area containing product information: 'Product: Intel(R) Chipset Device Software', 'Release: Production Version', 'Version: 8.3.0.1013', 'Target Chipset#: Q33/G33/G31/P35', and 'Date: March 05 2007'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>	 <p>The screenshot shows the 'Setup Is Complete' window. It features the Intel logo and a background image of a dirt road. The text reads: 'The setup program successfully installed the Intel® Chipset Device Software onto this computer. Click Finish to complete the setup process.' At the bottom, there is a single button: 'Finish'.</p>
<p>3. Click Next on the Information screen.</p>	<p>4. When installation is complete, click Finish.</p>

Intel Graphics Driver Installation

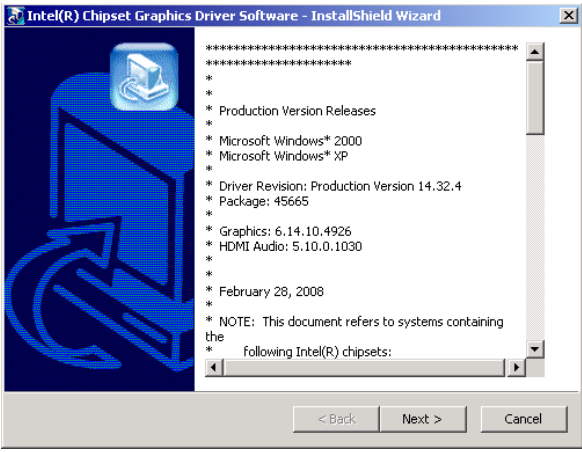	
<p>1. Click Next on the Startup screen.</p>	<p>2. Click Next on the Welcome screen.</p>
	
<p>3. Click Yes on the License Agreement screen.</p>	<p>4. Click Next on the Information screen.</p>
	
<p>5. Click Next on the Setup Progress screen.</p>	<p>6. When installation is complete, click Finish and restart the system.</p>

ELO Touch Screen Driver Installation

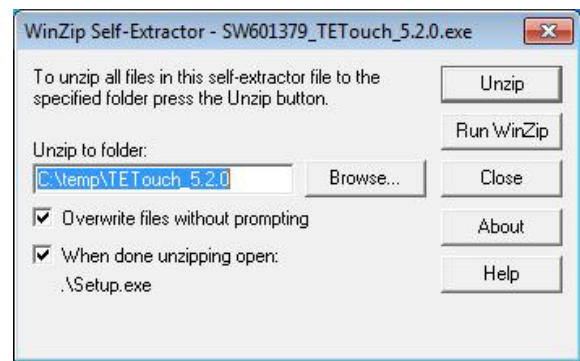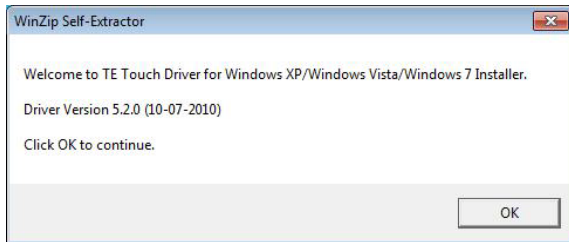



1. Click OK on the Welcome screen.

2. Click Unzip on the WinZip Self-Extractor screen.





3. Select Default installation language, click Next.

4. Select Install Serial Touchscreen Drivers, click Next.

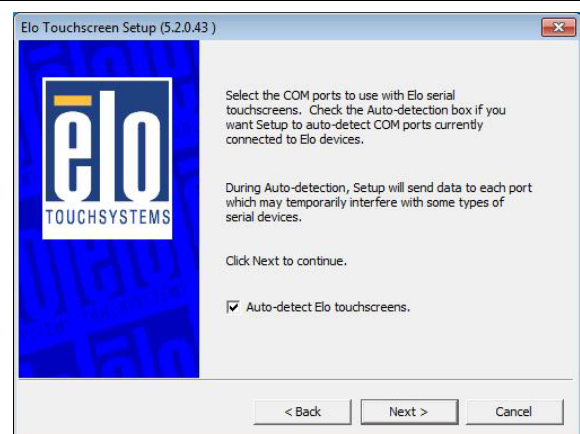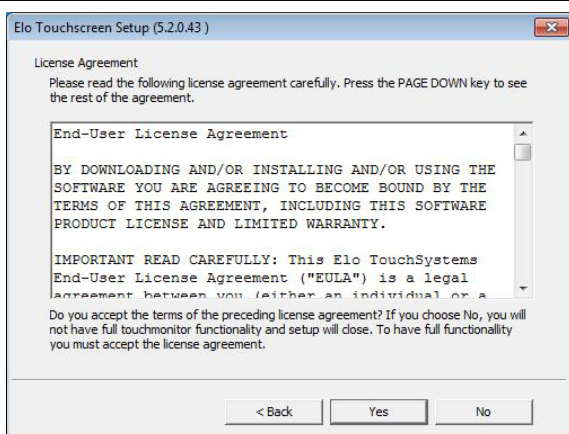



5. Click Yes on the License Agreement screen.

6. Select Auto-detect Elo devices, click Next.

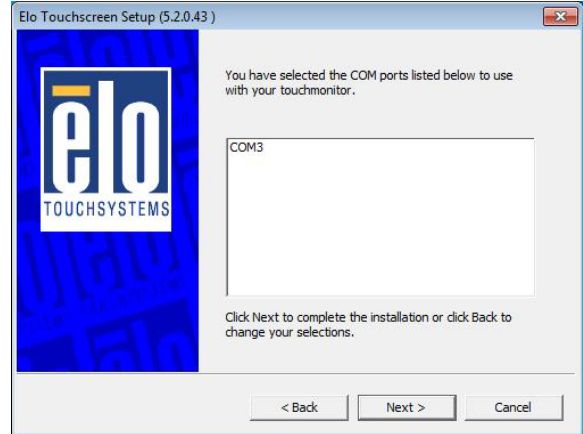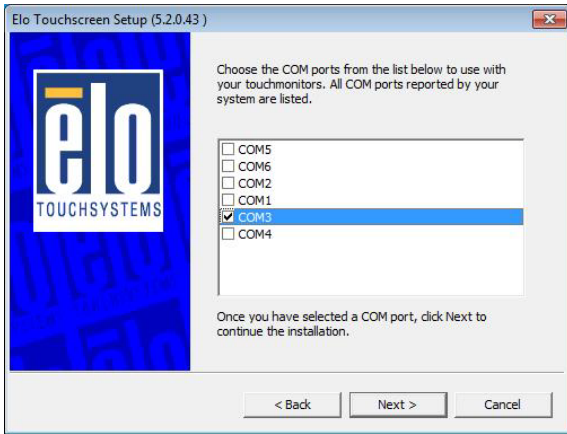

7. Select COM3, click Next.







8. Click Next to confirm COM port selection.

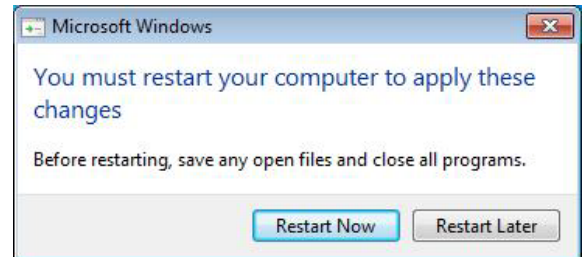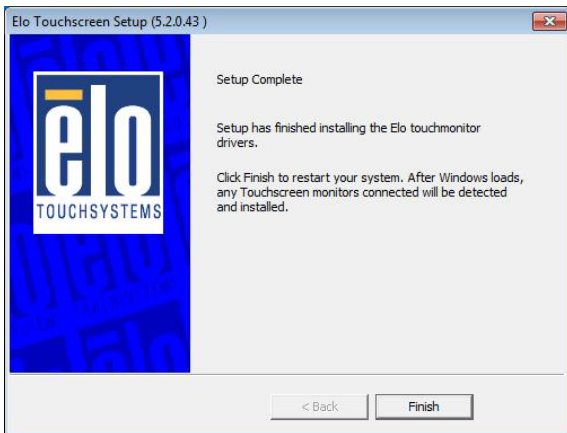





9. Click Finish.







10. Click Restart Now to apply these change.

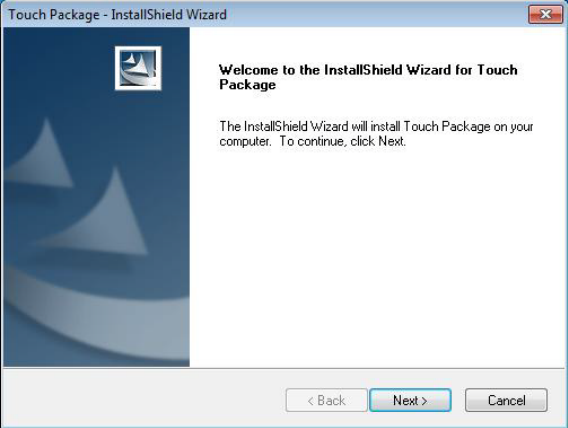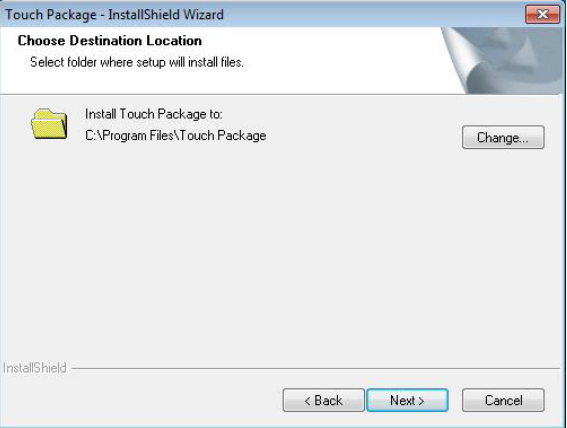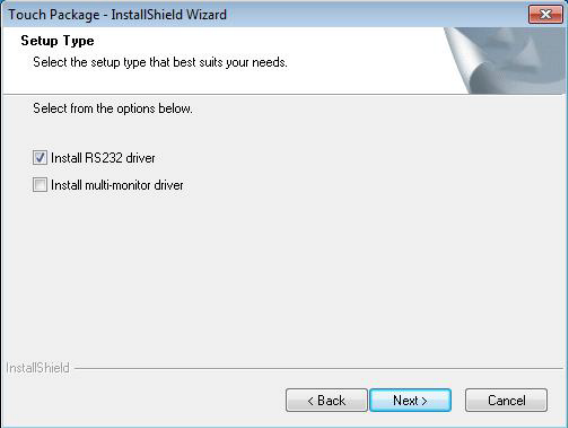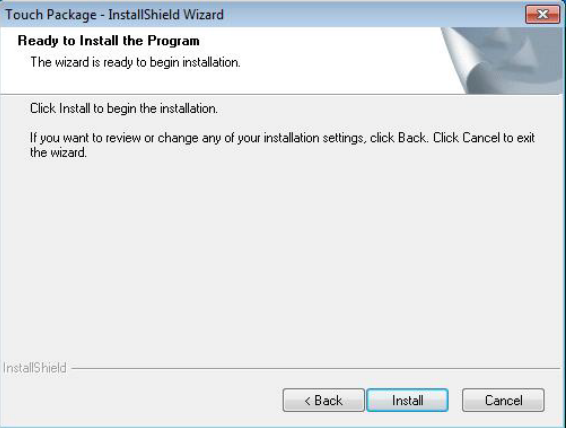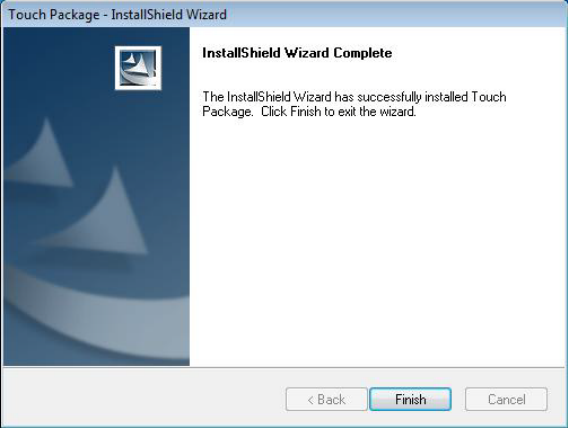
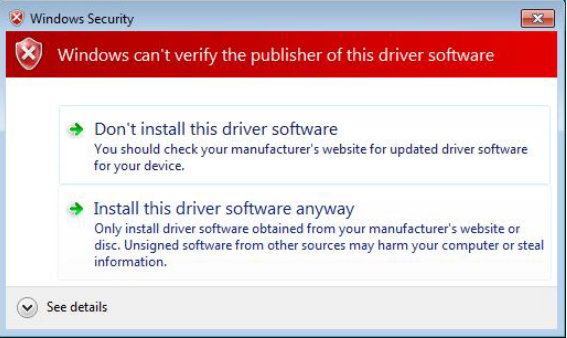
Abon Touch Screen Driver Installation

	
<p>1. Click Next on the Welcome screen.</p>	<p>2. Click Next to confirm destination location.</p>
	
<p>3. Select Install RS232 driver and click Next.</p>	<p>4. Click Install to begin installation.</p>
	
<p>5. Click Finish to complete.</p>	<p>6. For Windows 7 operating system, click Install this driver software anyway.</p>

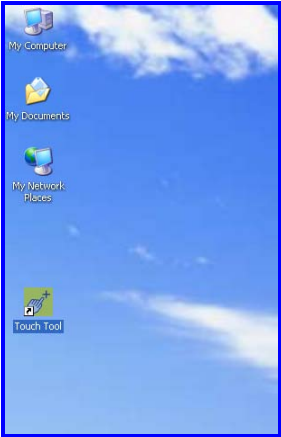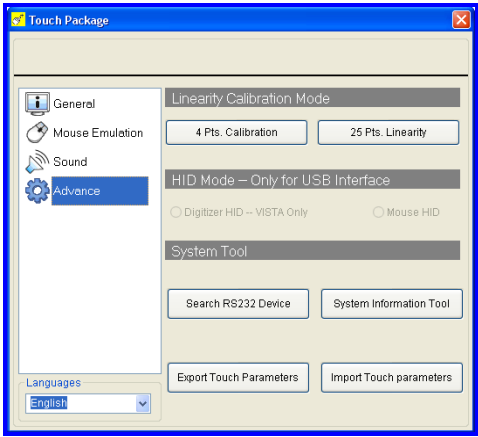 <p>Hardware Installation</p> <p>The software you are installing for this hardware: Touch Pack Serial Controller</p> <p>has not passed Windows Logo testing to verify its compatibility with Windows XP. [Tell me why this testing is important.]</p> <p>Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.</p> <p>Continue Anyway STOP Installation</p>	 <p>Touch Package Reboot</p> <p>Please reboot your computer to work your touch properly.</p> <p><input checked="" type="radio"/> Yes, I want to restart my computer now.</p> <p><input type="radio"/> No, I will restart my computer later.</p> <p>OK</p>
<p>7. For Windows XP operating system, click Continue anyway.</p>	<p>8. Click OK to reboot the system.</p>
	
<p>9. Run the Touch Tool on the desktop.</p>	<p>10. Select Advance and click on the 4 Pts. Calibration button.</p>

eGalax Touch Screen Driver Installation

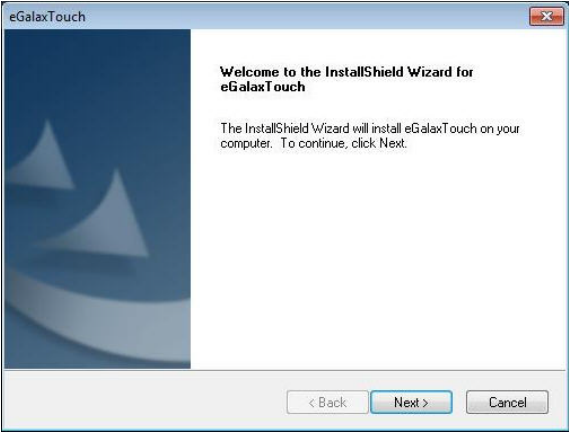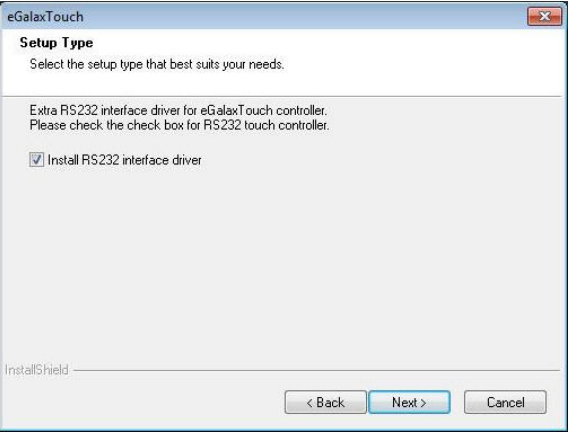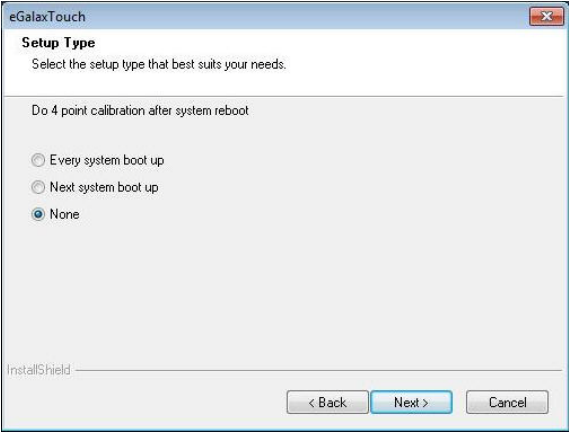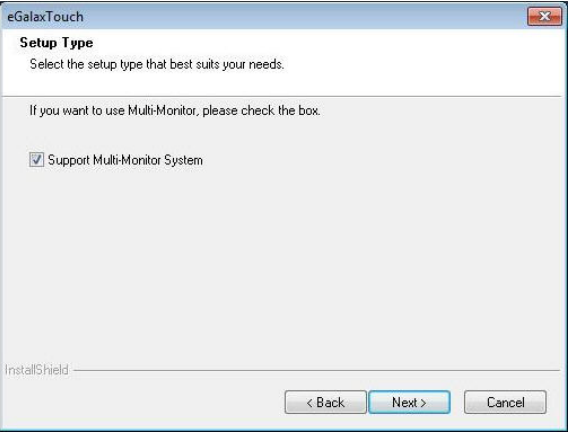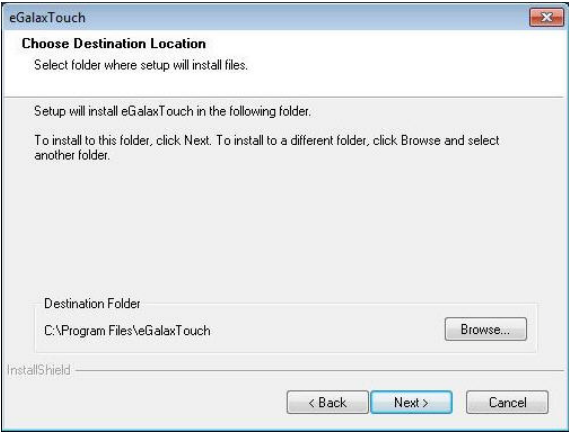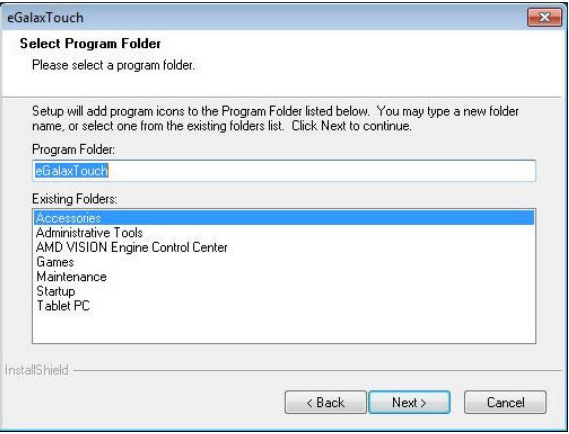
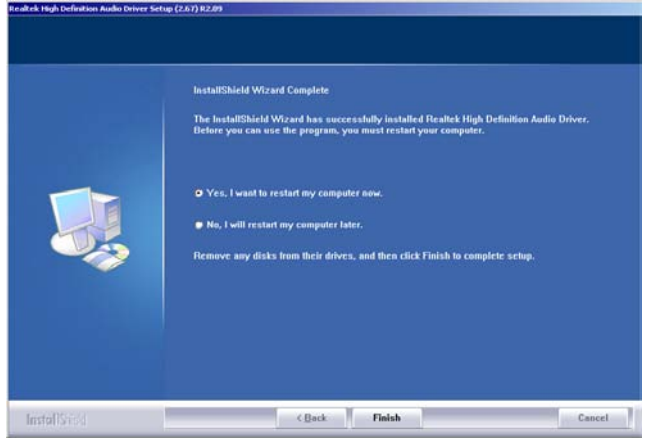
 <p>The screenshot shows the 'Welcome to the InstallShield Wizard for eGalaxTouch' window. It contains a blue graphic on the left and text on the right stating that the wizard will install eGalaxTouch. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>	 <p>The screenshot shows the 'Setup Type' window. It asks the user to select the setup type that best suits their needs. Below the text, there is a checkbox labeled 'Install RS232 interface driver' which is checked. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>
<p>1. Click Next on the Welcome screen.</p>	<p>2. Select Install RS232 interface driver and click Next.</p>
 <p>The screenshot shows the 'Setup Type' window. It asks the user to select the setup type that best suits their needs. Below the text, there are three radio button options: 'Every system boot up', 'Next system boot up', and 'None'. The 'None' option is selected. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>	 <p>The screenshot shows the 'Setup Type' window. It asks the user to select the setup type that best suits their needs. Below the text, there is a checkbox labeled 'Support Multi-Monitor System' which is checked. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>
<p>3. Select None and click Next.</p>	<p>4. Select Support Multi-Monitor System and click Next.</p>
 <p>The screenshot shows the 'Choose Destination Location' window. It asks the user to select a folder where setup will install files. Below the text, it says 'Setup will install eGalaxTouch in the following folder.' and 'To install to this folder, click Next. To install to a different folder, click Browse and select another folder.' There is a text box labeled 'Destination Folder' containing 'C:\Program Files\eGalaxTouch' and a 'Browse...' button. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>	 <p>The screenshot shows the 'Select Program Folder' window. It asks the user to select a program folder. Below the text, it says 'Setup will add program icons to the Program Folder listed below. You may type a new folder name, or select one from the existing folders list. Click Next to continue.' There is a text box labeled 'Program Folder' containing 'eGalaxTouch' and a list box labeled 'Existing Folders' containing 'Accessories', 'Administrative Tools', 'AMD VISION Engine Control Center', 'Games', 'Maintenance', 'Startup', and 'Tablet PC'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.</p>
<p>5. Choose Destination Location and click Next.</p>	<p>6. Select Program Folder and click Next.</p>

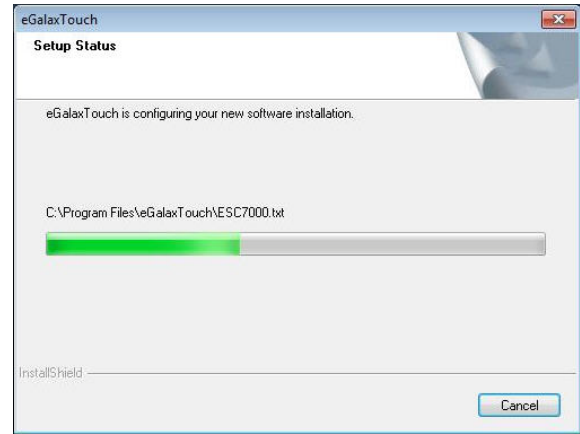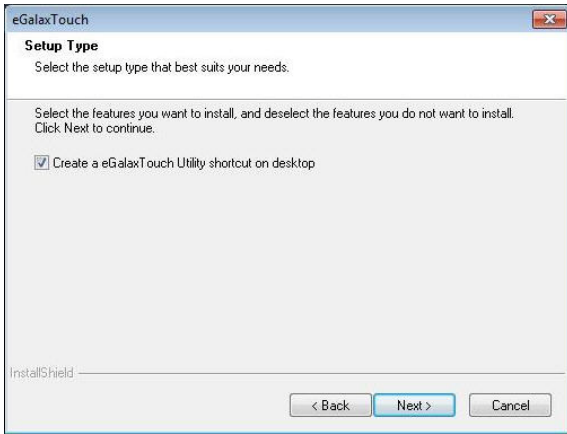




7. Select to creat a shortcut and click Next.

8. New software installation.



Audio Driver Installation

	
<p>1. Click Next on the Welcome screen.</p>	<p>2. When installation is complete, click Finish to restart the system.</p>

Ethernet Driver Installation for Windows XP

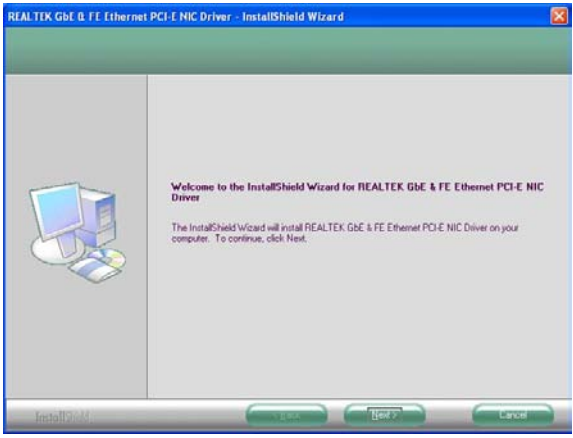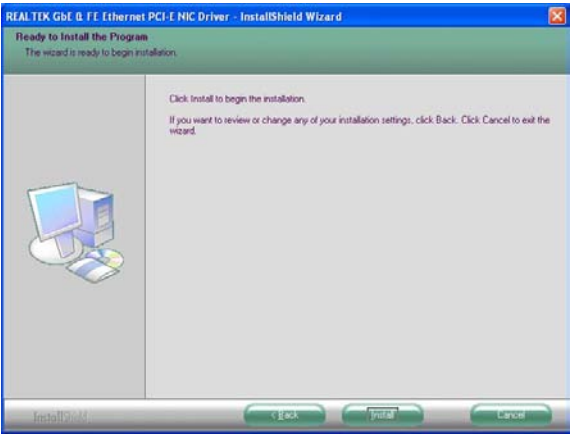
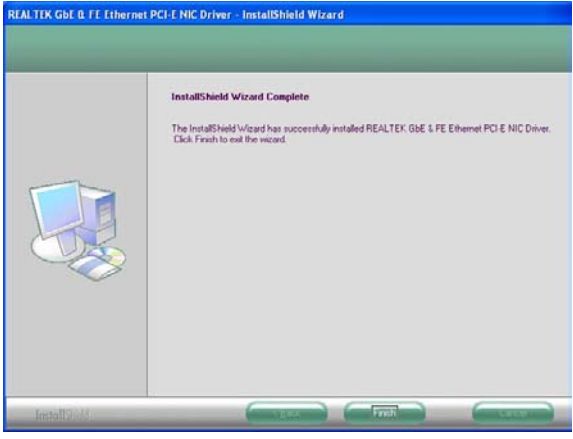
	
1. Click Next.	2. Click Install.
	
3. Click Finish.	

Ethernet Driver Installation for Windows 7

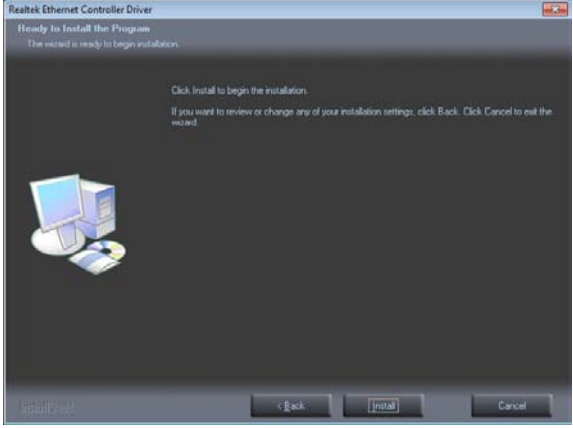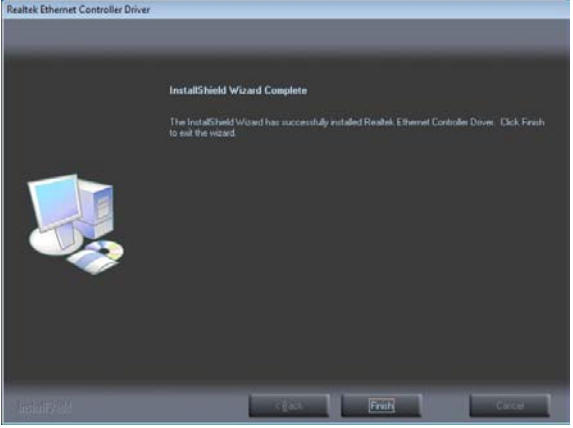	
1. Click Install.	2. Click Finish.



Wireless LAN Driver Installation (optional)

1. Enter the **LR802UKN3_802.11bgn** folder and then run the IS_AP_STA_RT2870_D.exe.

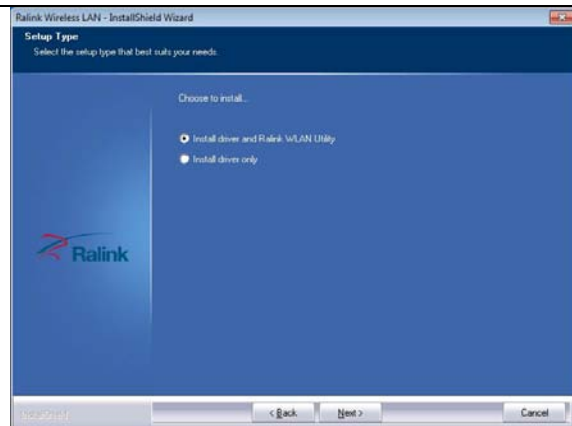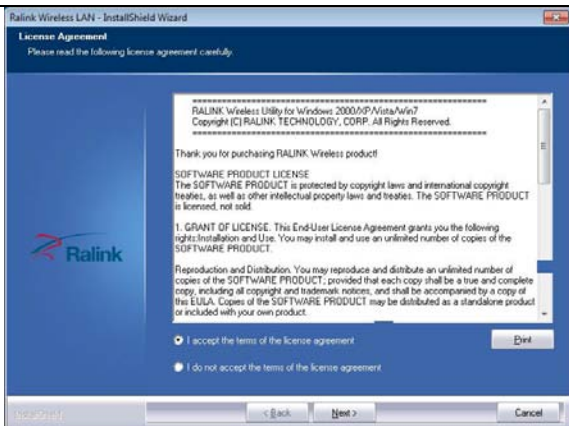



2. Click Accept on the License Agreement screen.

3. Alternative, and then click Next.

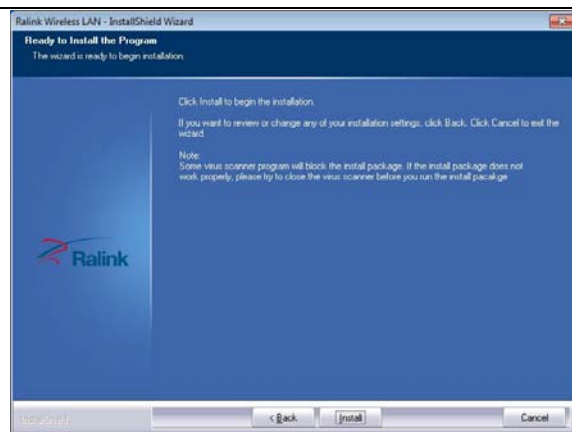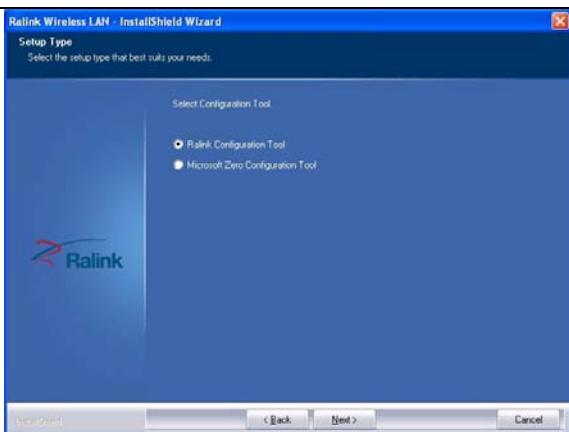


4. For Windows XP operating system, select Configuration Tool.

5. Click Install.

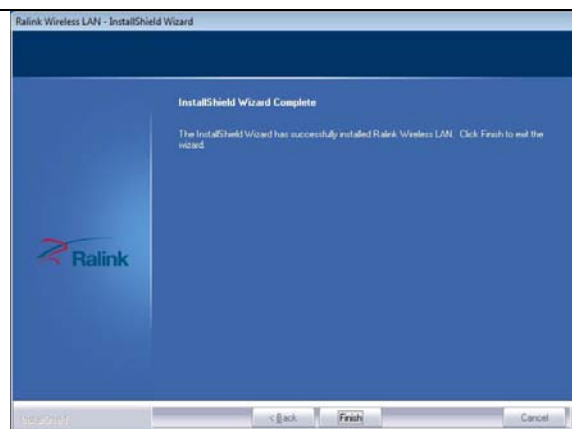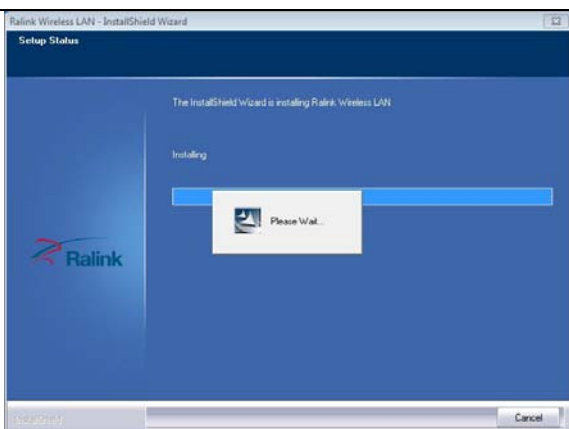

6. Wait as the WLAN driver is installed.

7. Click Finish.


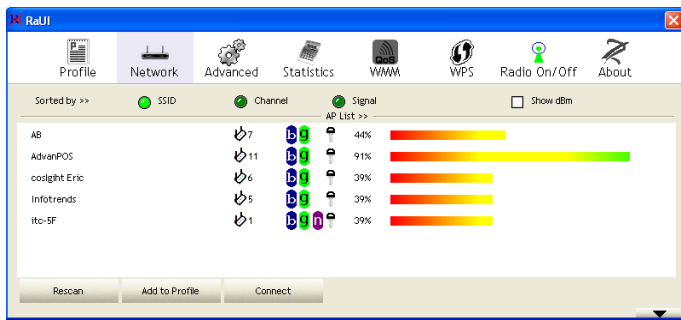


8. When installation is complete, the WLAN utility will automatically appear on the desktop.

Rear Mount VFD USB-to-Serial Driver Installation (optional)


The WP-6511\6521 VFD port is a USB interface. The 9mm VFD uses a Serial interface, so in order to enable it, you must install the included USB-to-Serial interface driver.

1. First, plug in the VFD Module.
2. Enter the **USB To COM Driver** folder and then run utility program PL2303_Prolific_driverInstaller_v130.

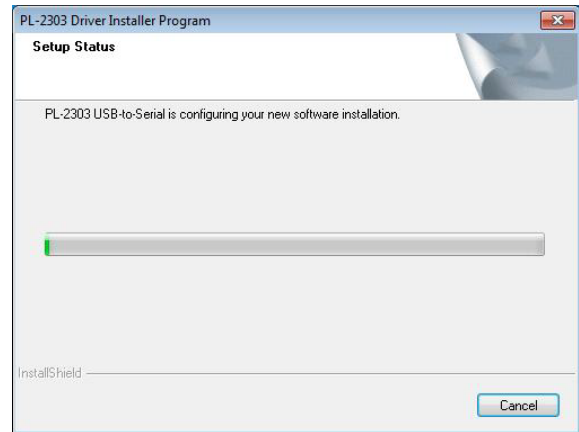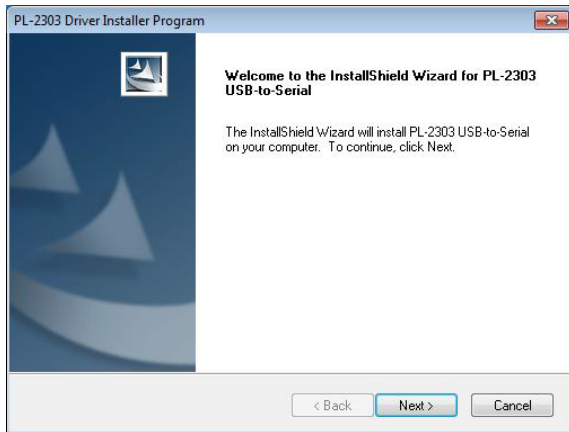

3. Click Next on the Welcome screen.



4. Wait as the driver is installed.

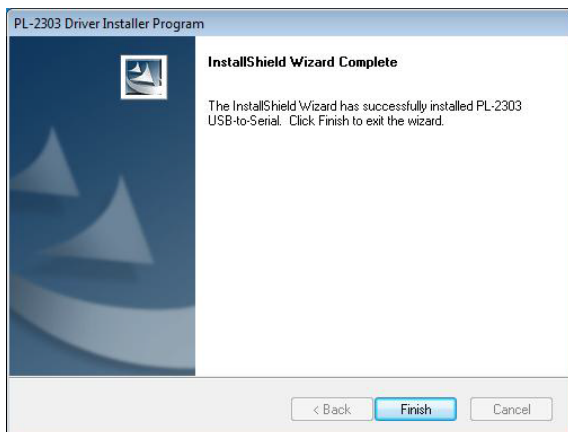

5. Click Finish.



RFID Driver Installation (optional)

1. First, plug in the RFID Module.
2. Enter the **MF320U** folder and then run the MifareDemoSetup_PSW00020.exe.

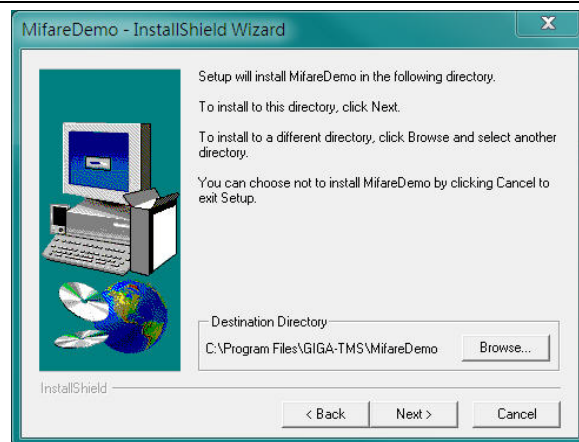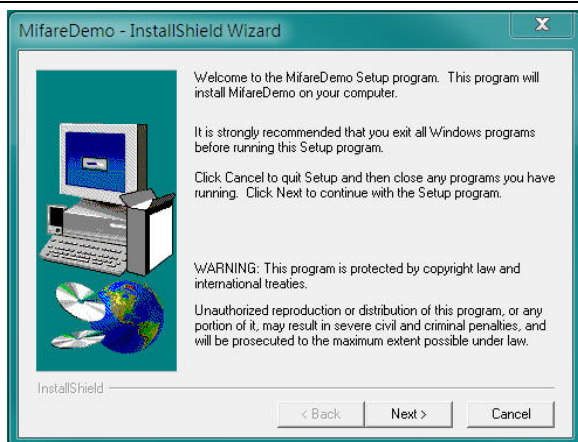


3. Click Next.

4. Click Next to accept the Destination Directory.

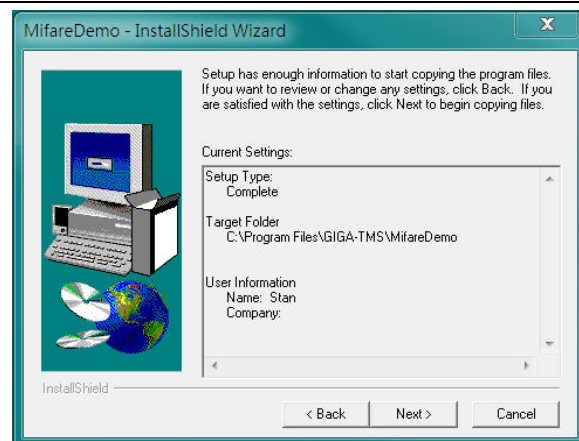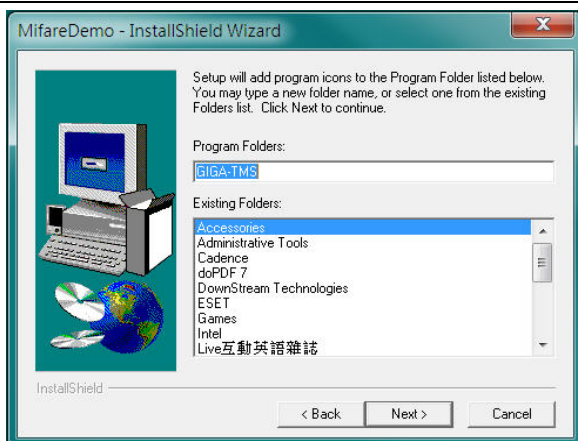

5. Click Next after making sure the folder.

6. Click Next to begin copy files.

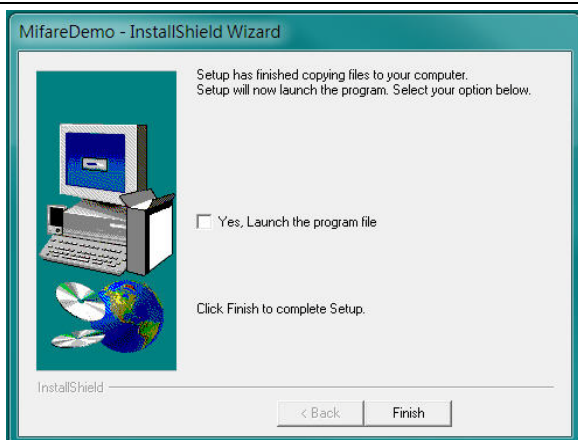


7. Click Finish.

MSR Driver Installation (optional)

1. Plug in MSR module.
2. Select your MSR interface PS2 or USB.
3. For PS2 interface: Run the MSRfgSetup_V1_4R7_PSW00025.exe.
For USB interface: Enter the **Software** folder and then run the HISD_MSR_PSW00003.exe.
4. Follow on-screen instructions to install your MSR driver.



Fingerprint Reader Driver Installation (optional)

1. Plug in the 2-in-1 Fingerprint Reader and MSR module.
2. Enter the **SDK** folder and then run the setup.exe.

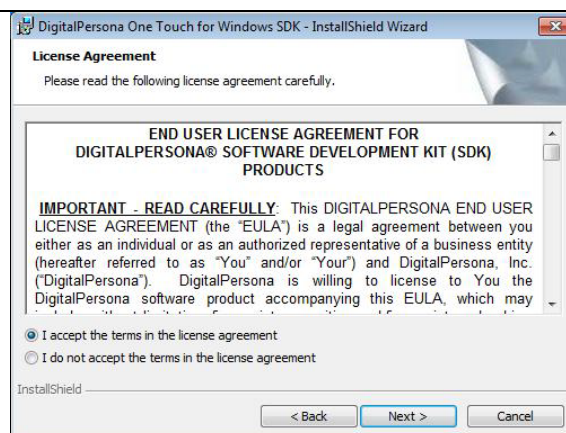



3. Click Next on the Welcome screen.

4. Click Next on the License Agreement screen.

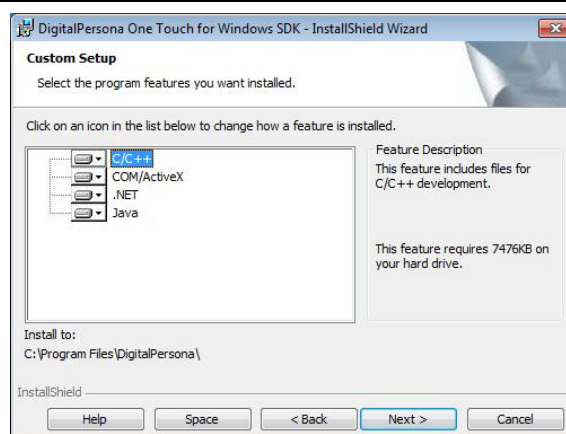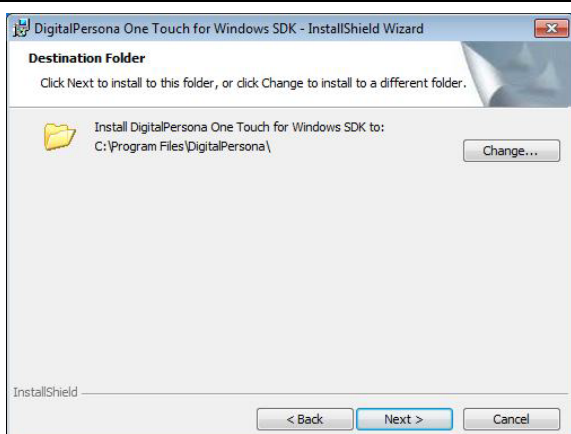




5. Click Next to accept the destination folder.

6. Click Next to begin installation.

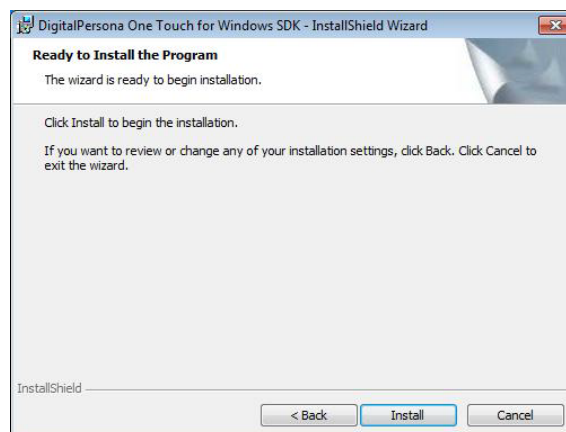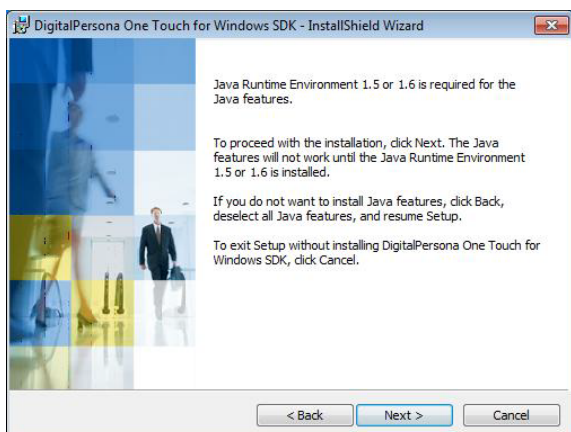


7. To proceed with the installation, click Next.

8. Click Install to begin the installation.

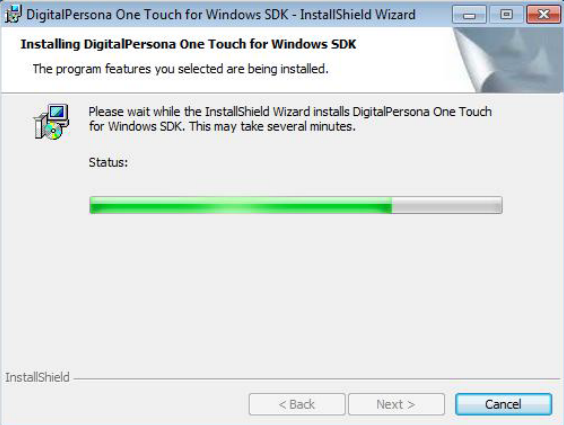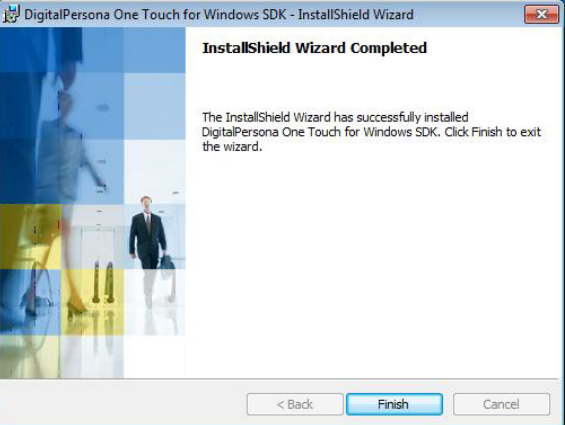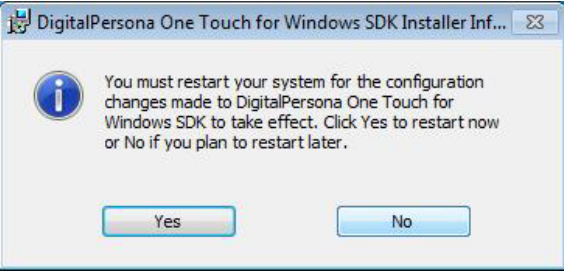	
<p>9. Wait as the driver is installed.</p>	<p>10. Click Finish.</p>
	
<p>11. Click Yes to restart the system (required).</p>	



IC Card Reader Driver Installation (optional)

1. Plug in the 3-in-1 MSR/I-Button/IC Card Reader module.
2. Enter the **EZ100PU Driver** folder.
3. Select your POS operating system and then run the setup.exe.

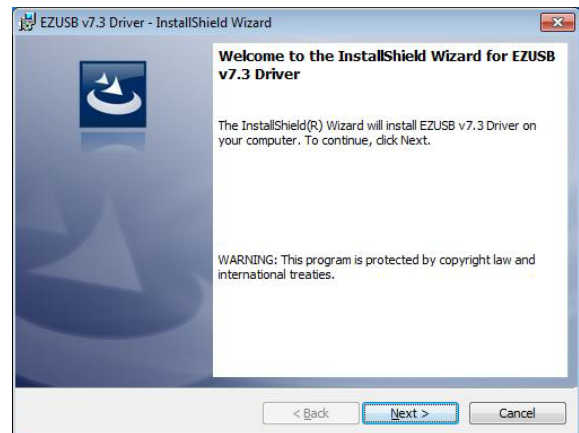



4. Select language, click OK.

5. Click Next on the Welcome screen.

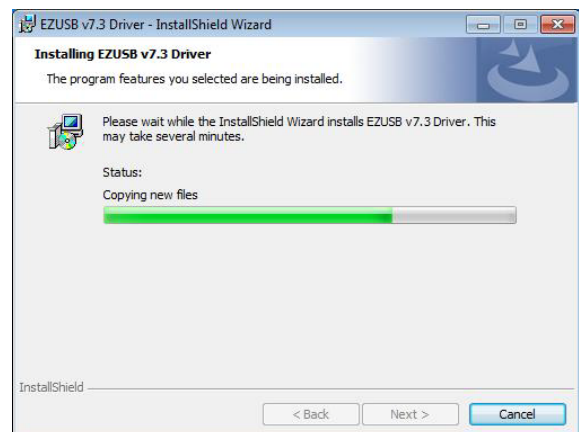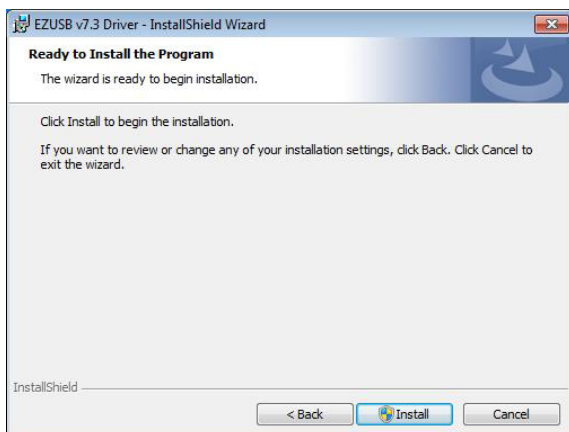

6. Click Install to begin the installation.




7. Wait as the driver is installed.

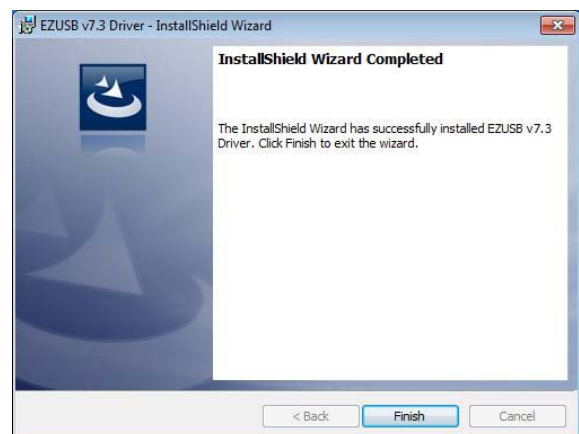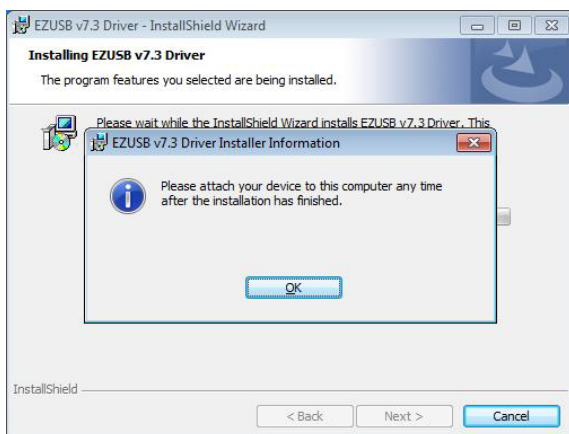

8. Click OK on the Note screen.







9. Click Finish.


AdvanPOS System Driver Installation

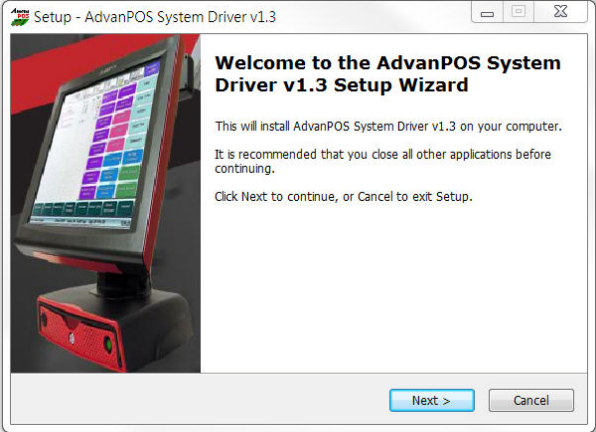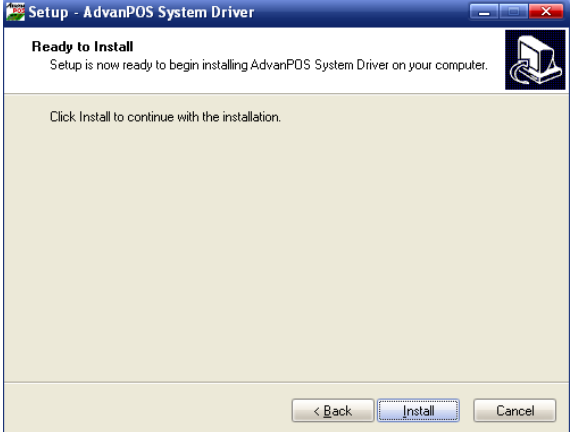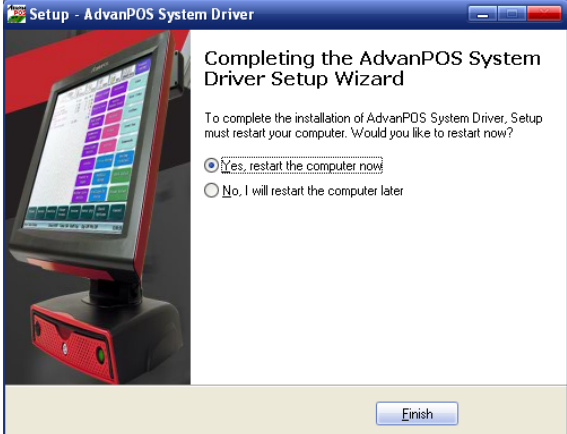	
<p>1. Click Next on the Welcome screen.</p>	<p>2. Click Install on the Ready to Install screen.</p>
	
<p>3. Click Finish on the Completing installation screen. A system restart is required to complete the installation.</p>	

OPOS CCO Driver Installation


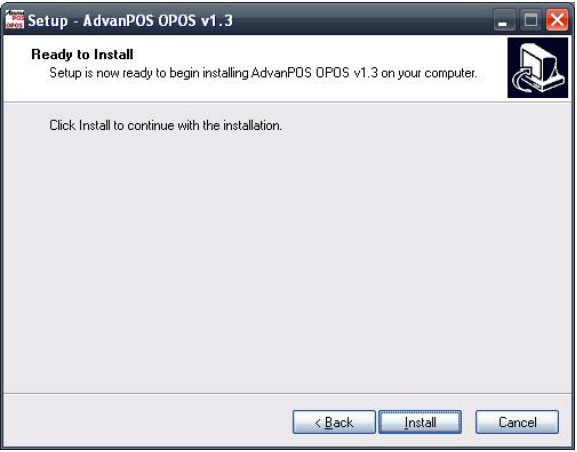

The OPOS driver for the WP-6511/WP-6521 supports the MSR, I-Button (KeyLock), RFID, VFD (Line-Display) and Scanner. Before installing the OPOS driver, please make sure the AdvanPOS System Driver has been installed.

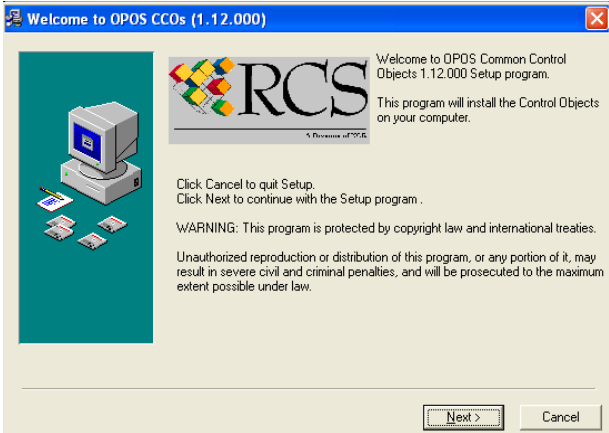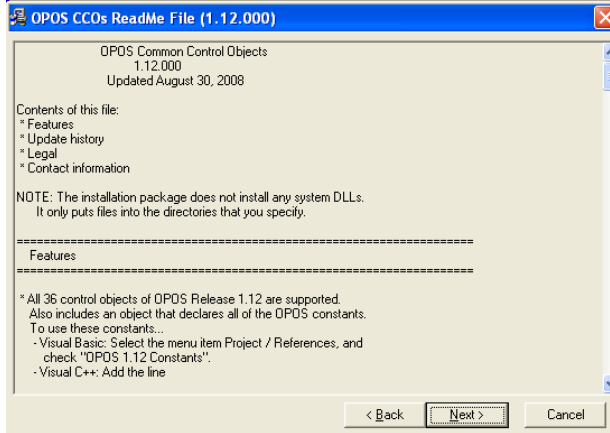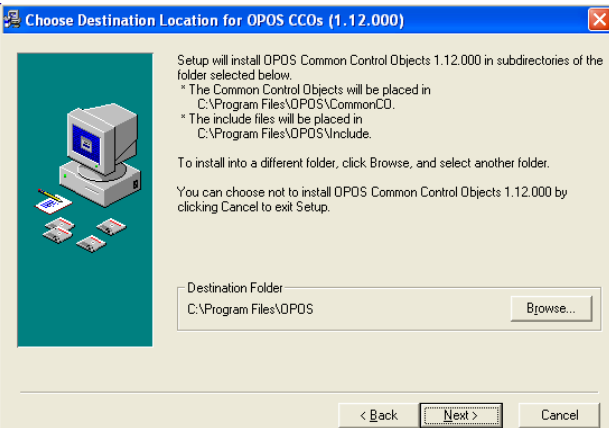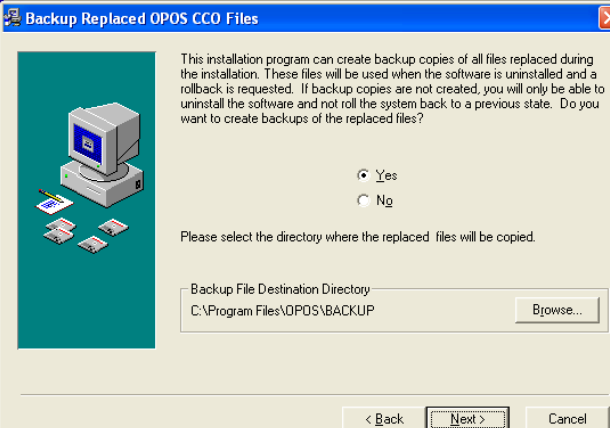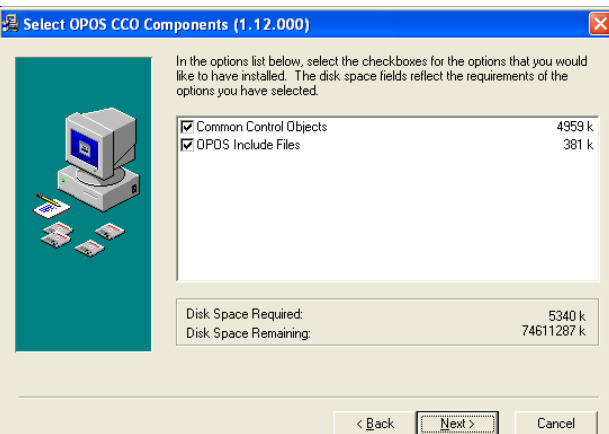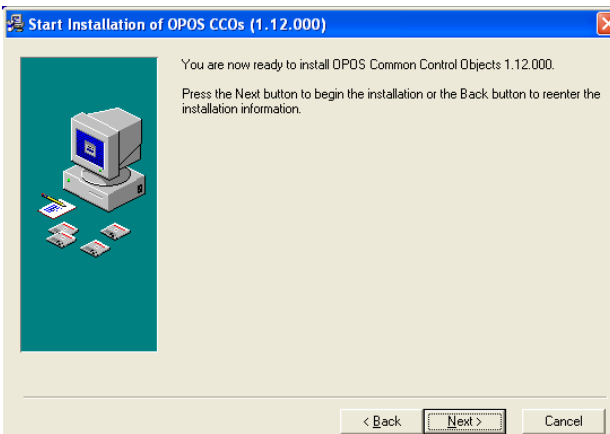	
<p>1. Click Next on the Welcome screen.</p>	<p>2. Click Next on the ReadMe screen.</p>
	
<p>3. Select the Destination Location and click Next.</p>	<p>4. Click Yes to backup the CCO files and select backup file destination directory, then click Next.</p>
	
<p>5. Select Common Control Objects and OPOS Include Files, then Click Next.</p>	<p>6. Click Next on the Start Installation screen.</p>

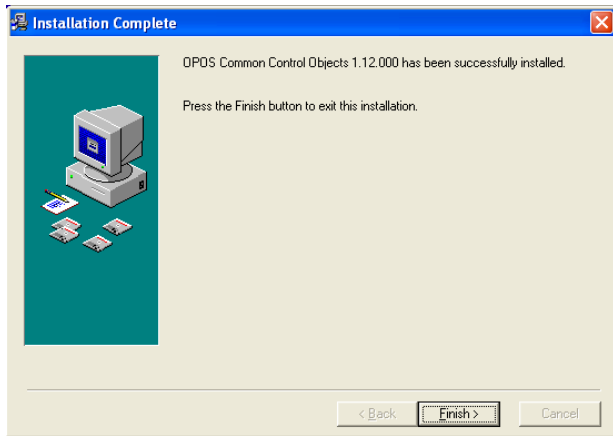

7. Click Finish on the Installation Complete screen.

AdvanPOS OPOS Driver Installation

	
<p>1. Click Next on the Welcome screen.</p>	<p>2. Click Install on the Setup screen.</p>
	
<p>3. Click Finish on the Completing installation screen.</p>	

Appendix A. Sample C++ Cash Drawer Code for Windows



NOTE:

Requires installation of System Driver. Refer to the System Driver Installation section for instructions.

1. Open Cash Drawer

```
// IOCTL Codes
#define GPD_TYPE 56053
#define ADV_OPEN_CTL_CODE CTL_CODE(GPD_TYPE, 0x900, METHOD_BUFFERED, FILE_ANY_ACCESS)
#define ADV_STATUS_CTL_CODE CTL_CODE(GPD_TYPE, 0x901, METHOD_BUFFERED, FILE_ANY_ACCESS)

void OpenDrawer(UCHAR uWhichDrawer)
{
    // uWhichDrawer = 1 => CD#1, uWhichDrawer = 2 => CD#2
    HANDLE hFile;
    BOOL bRet;
    UCHAR uDrawer = uWhichDrawer;

    // Open the driver
    hFile = CreateFile("\\\\.\\ADVSYS",
                      GENERIC_WRITE | GENERIC_READ,
                      FILE_SHARE_READ | FILE_SHARE_WRITE, NULL,
                      OPEN_EXISTING, FILE_ATTRIBUTE_NORMAL, 0);

    if (m_hFile == INVALID_HANDLE_VALUE)
    {
        AfxMessageBox("Unable to open Cash Drawer Device Driver!");
        return;
    }

    // Turn on the Cash Drawer Output (Fire the required solenoid)
    bRet = DeviceIoControl(hFile, ADV_CD_OPEN_CTL_CODE,
                          &uDrawer, sizeof(uDrawer),
                          NULL, 0,
                          &ulBytesReturned, NULL);

    if (bRet == FALSE || ulBytesReturned != 1)
    {
        AfxMessageBox("Failed to write to cash drawer driver");
        CloseHandle(hFile);
        return;
    }

    CloseHandle(hFile);
}
```

2. Get Cash Drawer Status

```
void GetDrawerState()
{
    HANDLE hFile;
    BOOL bRet;

    // Open the driver
    hFile = CreateFile(TEXT("\\\\.\\ADVSYS"),
                      GENERIC_WRITE | GENERIC_READ,
                      FILE_SHARE_READ | FILE_SHARE_WRITE, NULL,
                      OPEN_EXISTING, FILE_ATTRIBUTE_NORMAL, 0);

    if (m_hFile == INVALID_HANDLE_VALUE)
```

```

{
    AfxMessageBox("Unable to open Cash Drawer Device Driver!");
    return;
}

// Read the CD status
bRet = DeviceIoControl(hFile, ADV_CD_STATUS_CTL_CODE,
    NULL, 0
    &ReadByte, sizeof(ReadByte),
    &ulBytesReturned, NULL);

if (bRet == FALSE || ulBytesReturned != 1)
{
    AfxMessageBox("Failed to Read from cash drawer driver");
    CloseHandle(hFile);
    return;
}
else
{
    AfxMessageBox(ReadByte ? "Drawer Open" : "Drawer Closed");
}

CloseHandle(hFile);
}

```

Appendix B. Sample VB.NET Cash Drawer Code for Windows



NOTE:

Requires installation of System Driver. Refer to the System Driver Installation section for instructions.

```
Private Declare Function CreateFile Lib "kernel32" Alias "CreateFileA" (ByVal lpFileName As String, ByVal dwDesiredAccess As Integer, ByVal dwShareMode As Integer, ByVal lpSecurityAttributes As IntPtr, ByVal dwCreationDisposition As Integer, ByVal dwFlagsAndAttributes As Integer, ByVal hTemplateFile As IntPtr) As Integer
Private Declare Function DeviceIoControl Lib "kernel32" (ByVal hDevice As IntPtr, ByVal dwIoControlCode As Integer, ByVal lpInBuffer As Byte, ByVal nInBufferSize As Integer, ByVal lpOutBuffer As Byte, ByVal nOutBufferSize As Integer, ByVal lpBytesReturned As Long, ByVal lpOverlapped As Integer) As Integer
Private Declare Function CloseHandle Lib "kernel32" (ByVal hObject As Long) As Integer

Public Shared Function CTL_CODE(ByVal DeviceType As Integer, ByVal func As Integer, ByVal Method As Integer, ByVal Access As Integer) As Integer
    Return (DeviceType << 16) Or (Access << 14) Or (func << 2) Or Method
End Function

Dim DeviceHandle As Integer
Const GENERIC_READ As Long = &H80000000, GENERIC_WRITE As Long = &H40000000
Const FILE_SHARE_READ As Long = &H1, FILE_SHARE_WRITE As Long = &H2
Const OPEN_EXISTING As Long = &H3, FILE_ATTRIBUTE_NORMAL As Long = &H80
Const INVALID_HANDLE_VALUE As Long = &HFFFFFFF

Const ADVPORT_TYPE As Long = 40000, METHOD_BUFFERED As Long = 0, FILE_ANY_ACCESS As Long = 0
Dim ADV_OPEN_CTL_CODE As Long = CTL_CODE(ADVPORT_TYPE, &H900, METHOD_BUFFERED, FILE_ANY_ACCESS)
Dim ADV_STATUS_CTL_CODE As Long = CTL_CODE(ADVPORT_TYPE, &H901, METHOD_BUFFERED, FILE_ANY_ACCESS)

Private Sub Form1_Load(ByVal sender As System.Object, ByVal e As System.EventArgs) Handles MyBase.Load
    DeviceHandle = CreateFile("\\.\ADVSYS", GENERIC_READ Or GENERIC_WRITE, FILE_SHARE_READ Or FILE_SHARE_WRITE, 0, OPEN_EXISTING, FILE_ATTRIBUTE_NORMAL, 0)
    If DeviceHandle = INVALID_HANDLE_VALUE Then
        'Failed to Open Cash Drawer Driver
        Timer1.Enabled = False
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
End Sub

Private Sub Button1_Click(ByVal sender As System.Object, ByVal e As System.EventArgs) Handles Button1.Click
    Dim iBytesRtn As Integer
    Dim iRet As Integer, iDrawer As Integer

    ' Open Drawer #1
    iDrawer = &H1
    iRet = DeviceIoControl(DeviceHandle, ADV_OPEN_CTL_CODE, iDrawer, 4, 0, 0, iBytesRtn, 0)
    If (iRet = 0 Or iBytesRtn <> 1) Then
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
End Sub

Private Sub Button2_Click(ByVal sender As System.Object, ByVal e As System.EventArgs) Handles Button2.Click
    Dim iBytesRtn As Integer
    Dim iRet As Integer, iDrawer As Integer

    ' Open Drawer #2
    iDrawer = &H2
    iRet = DeviceIoControl(DeviceHandle, ADV_OPEN_CTL_CODE, iDrawer, 4, 0, 0, iBytesRtn, 0)
```

```

    If (iRet = 0 Or iBytesRtn <> 1) Then
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
End Sub

Private Sub Timer1_Tick(ByVal sender As System.Object, ByVal e As System.EventArgs) Handles Timer1.Tick
    Dim iBytesRtn As Integer
    Dim iRet As Integer, iStatus As Integer

    ' Get Drawer Status
    iRet = DeviceIoControl(DeviceHandle, ADV_STATUS_CTL_CODE, 0, 0, iStatus, 4, iBytesRtn, 0)
    If (iRet = 0 Or iBytesRtn <> 1) Then
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
    If (iStatus = 0) Then
        StatusText.Text = "Cash Drawer(s) Closed"
    Else
        StatusText.Text = "Cash Drawer(s) Open"
    End If
End Sub

```

Appendix C. Sample VB6.0 Cash Drawer Code for Windows



NOTE:

Requires installation of System Driver. Refer to the System Driver Installation section for instructions.

Option Explicit On

```
Private Declare Function CreateFile Lib "kernel32" Alias "CreateFileA" (ByVal lpFileName As String, ByVal dwDesiredAccess As Long, ByVal dwShareMode As Long, ByVal lpSecurityAttributes As SECURITY_ATTRIBUTES, ByVal dwCreationDisposition As Long, ByVal dwFlagsAndAttributes As Long, ByVal hTemplateFile As Long) As Long
Private Declare Function DeviceIoControl Lib "kernel32" (ByVal hDevice As Long, ByVal dwIoControlCode As Long, ByVal lpInBuffer As Any, ByVal nInBufferSize As Long, ByVal lpOutBuffer As Any, ByVal nOutBufferSize As Long, ByVal lpBytesReturned As Long, ByVal lpOverlapped As OVERLAPPED) As Long
Private Declare Function CloseHandle Lib "kernel32.dll" (ByVal hObject As Long) As Long
```

'CreateFile Custom Variables

```
Private Type SECURITY_ATTRIBUTES
    nLength As Long
    lpSecurityDescriptor As Long
    bInheritHandle As Long
End Type
```

'DeviceIoControl Custom Variables

```
Private Type OVERLAPPED
    Internal As Long
    InternalHigh As Long
    offset As Long
    OffsetHigh As Long
    hEvent As Long
End Type
```

```
Dim DeviceHandle As Integer
Dim SA As SECURITY_ATTRIBUTES
Dim SA1 As OVERLAPPED
Dim ADV_OPEN_CTL_CODE As Long
Dim ADV_STATUS_CTL_CODE As Long
```

```
Private Const GENERIC_READ As Long = &H80000000
Private Const GENERIC_WRITE As Long = &H40000000
Private Const FILE_SHARE_READ As Long = &H1
Private Const FILE_SHARE_WRITE As Long = &H2
Private Const OPEN_EXISTING As Long = &H3
Private Const FILE_ATTRIBUTE_NORMAL As Long = &H80
Private Const INVALID_HANDLE_VALUE As Long = &HFFFFFFFF
```

```
Private Const METHOD_BUFFERED As Long = 0, FILE_ANY_ACCESS As Long = 0
```

```
Private Function CTL_CODE(ByVal lngDevFileSys As Long, ByVal lngFunction As Long, ByVal lngMethod As Long, ByVal lngAccess As Long) As Long
    CTL_CODE = (lngDevFileSys) Or (lngAccess * (2 ^ 14)) Or (lngFunction * (2 ^ 2)) Or lngMethod
End Function
```

```

Private Sub Form_Load()
    '-1673527296 Come from c code (40000 <<16)
    ADV_OPEN_CTL_CODE = CTL_CODE(-1673527296, &H900, METHOD_BUFFERED, FILE_ANY_ACCESS)
    ADV_STATUS_CTL_CODE = CTL_CODE(-1673527296, &H901, METHOD_BUFFERED, FILE_ANY_ACCESS)

    DeviceHandle = CreateFile("\\.\ADVSYS", GENERIC_READ Or GENERIC_WRITE, FILE_SHARE_READ Or
FILE_SHARE_WRITE, SA, OPEN_EXISTING, FILE_ATTRIBUTE_NORMAL, 0)
    If DeviceHandle = INVALID_HANDLE_VALUE Then
        'Failed to Open Cash Drawer Driver
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
End Sub

Private Sub Command1_Click()
    Dim iBytesRtn As Long
    Dim iRet As Integer, iDrawer As Integer

    ' Open Drawer #1
    iDrawer = &H1
    iRet = DeviceIoControl(DeviceHandle, ADV_OPEN_CTL_CODE, iDrawer, 4, 0, 0, iBytesRtn, SA1)
    If (iRet = 0 Or iBytesRtn <> 1) Then
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
End Sub

Private Sub Command2_Click()
    Dim iBytesRtn As Long
    Dim iRet As Integer, iDrawer As Integer

    ' Open Drawer #2
    iDrawer = &H2
    iRet = DeviceIoControl(DeviceHandle, ADV_OPEN_CTL_CODE, iDrawer, 4, 0, 0, iBytesRtn, SA1)
    If (iRet = 0 Or iBytesRtn <> 1) Then
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
End Sub

Private Sub Timer1_Timer()
    Dim iBytesRtn As Long
    Dim iRet As Integer, iStatus As Integer

    ' Get Drawer Status
    iRet = DeviceIoControl(DeviceHandle, ADV_STATUS_CTL_CODE, 0, 0, iStatus, 4, iBytesRtn, SA1)
    If (iRet = 0 Or iBytesRtn <> 1) Then
        Timer1.Enabled = False
        MsgBox("Error opening ADVSYS.sys. Error = " & Err.LastDllError)
    End If
    If (iStatus = 0) Then
        Label1.Caption = "Cash Drawer(s) Closed"
    Else
        Label1.Caption = "Cash Drawer(s) Open"
    End If
End Sub

```